


SERVICE MANUAL

SUPER INTEGRATED AMPLIFIER

SANSUI AU-X1

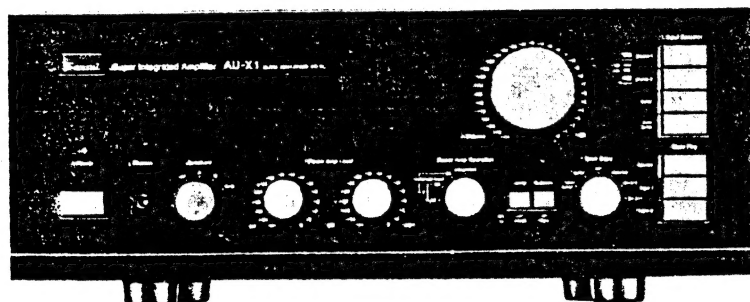

SPECIFICATIONS

Power output

Min. RMS, both channels driven, from 5 to 20,000 Hz,
with no more than 0.007 % total harmonic distortion
160 watts per channel into 8 ohms

Load impedance 8 ohms

Total harmonic distortion (POWER AMP IN)

. less than 0.007 % at or below
rated min. RMS power output

Intermodulation distortion (70 Hz : 7 kHz = 4:1 SMPTE
method) (POWER AMP IN)

. less than 0.007 % at or below
rated min. RMS power output

Rise time 0.5 μ sec

Slew rate ± 260 V/ μ sec

Frequency response (at 1 watt) (POWER AMP IN)

. DC to 500,000 Hz +0 dB -3 dB

Damping factor (1 kHz, both channels driven)

. 100 into 8 ohms

RIAA curve deviation (PHONO, 20 Hz to 20 kHz)

. +0.2 dB, -0.2 dB

Input sensitivity and impedance (1 kHz, for rated power
output)

PHONO (MC) 0.1 mV/200 ohms

(Max. input capability; 40 mV at 1 kHz, less than
0.01 % total harmonic distortion)

PHONO (MM) 2.5 mV/47 kilohms

(Max. input capability; 330 mV at 1 kHz, less than
0.01 % total harmonic distortion)

AUX/TUNER, TUNER, TAPE PLAY

. 200 mV/47 kilohms

POWER AMP IN 1 V/47 kilohms

Output level and impedance (1,000 Hz)

TAPE REC 200 mV into 47 kilohms/

600 ohms

PREAMP OUT 1 V into 47 kilohms/

600 ohms

Channel separation (1 kHz, at rated power output)

PHONO (MC) 70 dB

PHONO (MM) 75 dB

AUX/TUNER, TUNER, TAPE PLAY

. 80 dB

Hum and noise (short-circuit, A-network)

PHONO (MC) 76 dB

PHONO (MM) 91 dB

AUX/TUNER, TUNER, TAPE PLAY

. 100 dB

Controls

SUBSONIC -3 dB (16 Hz), 6 dB/oct

JUMP -14 dB

Power requirements

Power voltage 100, 120, 220, 240 V (50/60 Hz)

Power consumption

Rated consumption

. 500 watts

Dimensions 480 mm (18-15/16") W

197 mm (7-13/16") H

450 mm (17-3/4") D

Weight 27.7 kg (61.1 lbs) net



30.4 kg (67.0 lbs) packed

* Design and specifications subject to changes without
notice for improvements.



SANSUI ELECTRIC CO., LTD.

1. BLOCK DIAGRAM

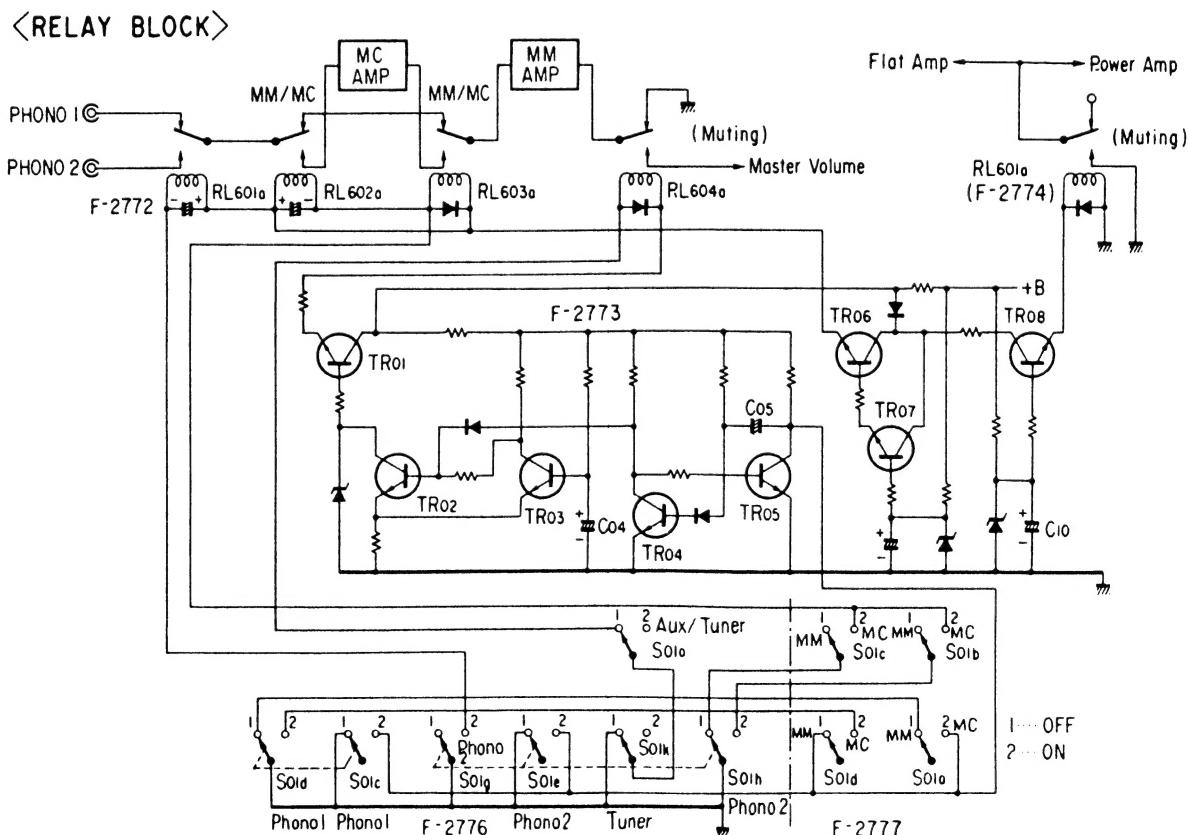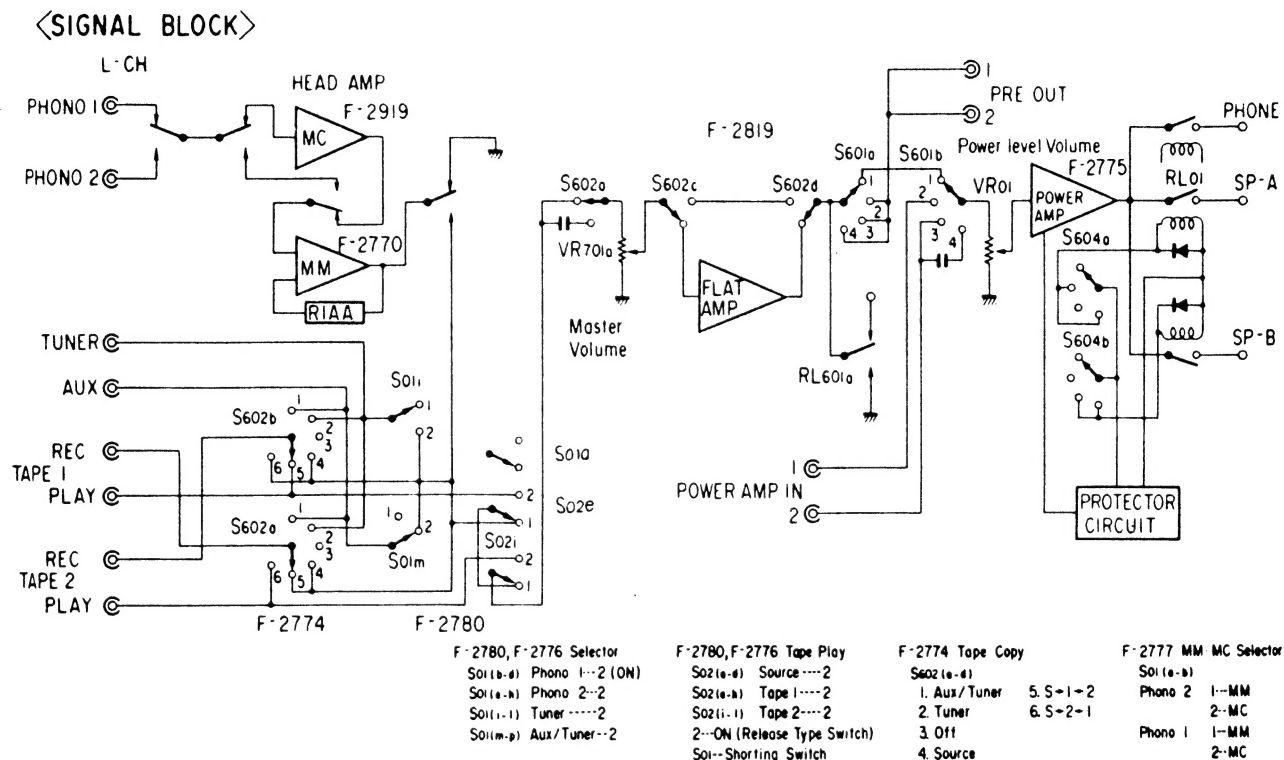

- The switch S01 is shorting type and generates pulse to function the relay circuit at switching.
- The S01 on F-2776, F-2777 is interlocking switch and only a contact or contacts joined by dotted line can be ON state (2 side) and others are released (1 side).

2. THE OPERATION & CHARACTERISTIC OF HIGH SPEED POWER TRANSISTOR

In order to up-grade the sound quality, AU-X1 employs the circuitry of the push-pull drive DC configuration from MC head amp to power amp stage, which provide superior dynamic and open-loop characteristics.

The improvement was made for parts such as volumes, wires, relays, electrolytic capacitors and semi-conductors. In particular, newly developed linear high speed device, LAPT (Linear Amplifier Power Transistor) is adapted in power stage, and the combination use of this high speed power transistor and diamond differential circuit allows slew rate of 260 V/ μ s and wide range low distortion amplification.

2-1. High Speed Power Transistor

The requirements for power transistor in order to elevate sound quality are;

- * to have high cut-off frequency, f_T (high speed device).
- * to make voltage dependance of DC forward-current transfer ratio, h_{FE} be little and have excellent linearity.
- * to have a large A.S.O. (Area of Safe Operation) and strong endurance against break-down.

The use of high speed power transistor with requirements above together with circuit improvement is effective for achievement of wide range and low distortion amplification. Transistors to meet with these requirements are both bi-polar and field effect transistor (FET).

Note: Cut-off frequency, f_T shows the frequency at which the small signal current gain will be 1 (0 dB) in common emitter circuit.

Comparison between bi-polar and field effect type as power transistor.

Table 1; Comparison of bi-polar and field effect type as a power device.

Characteristics	Bi-polar type	Field effect device junction type FET SIT	MOS FET
Input impedance	low	high	high
Thermal coefficient of operating current	positive	negative	negative
Stored carrier effect (Carrier storage effect)	exist	none	none
Transfer characteristic	exponential	square	square
Idling current as a output device	little	large	large
Output characteristic	pentode	triode	pentode
State at no input bias	off	on	on
Current path (Channel)	vertical	vertical	vertical & horizontal
Threshold voltage	low	intermediate	high
Cost	low	high	high

The advantages of FET are high input impedance and no thermal run-away because of negative thermal coefficient of operating current, however, there still remains price problem on FET, in addition, bi-polar type high speed power transistor are variously developed and becoming common so that AU-X1 employs bi-polar type power transistor (LAPT).

2-2. The Configuration of High Speed Transistor

In order to increase the cut-off frequency, f_T , it is necessary to make transistor base as thin as possible, but it oppose to A.S.O. (Area of Safe Operation) to enlarge. When making the transistor base thin, the injected current density is increased so that junction is destroyed by second-breakdown. To solve above problem, the construction of power transistor (LAPT) is parallel connection of divided 35 of small signal transistors, in addition, the defusion resistor is made at each emitter of divided transistor to equalize the flowing current.

Fig. 1 Illustration of emitter ballast resistor made by defusion.

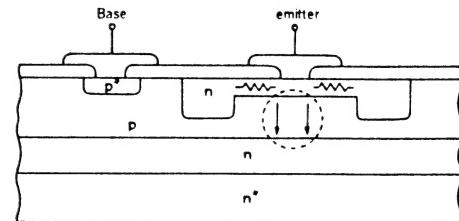


Fig. 2 Equivalent circuit of ballast resistor defused to emitter of transistor.


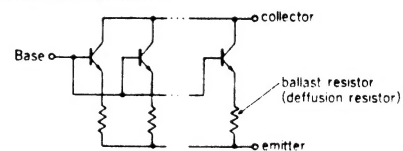


Fig. 3 Surface of LAPT before evaporation.

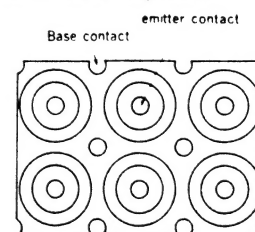

By connecting many small signal transistors with high f_T in parallel, power transistor with high f_T and large A.S.O. can be obtained. If there is current-concentration to one of small signal transistors, the voltage between emitter and base is decreased by the ballast resistor (defusion resistor) at emitter, which causes internal negative feedback and relieves the current-concentration.

2-3. The Characteristic and Merit of use of High Speed Power Transistor

- The relation between switching time, f_T , and h_{FE} of power transistor.

Fig. 4 Switching time





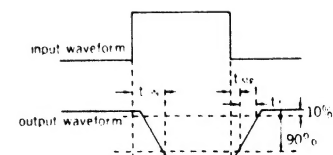


Fig. 5 Influence of switching time against sine-wave (of half cycle)

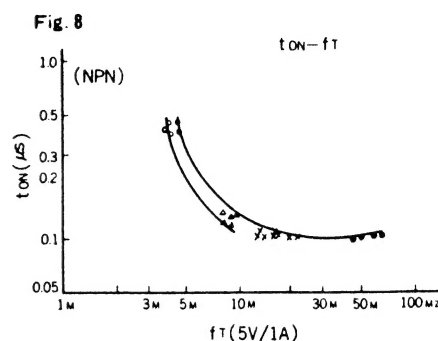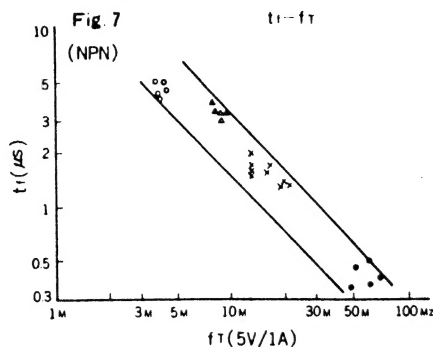

The more the switching time is shortened (high speed) the more the frequency range characteristic of power transistor is improved; this relation is indicated in Fig. 4), 5). Fig. 6), 7), 8) show the more the f_T is raised the more the switching speed is quickened.



- The relation between switching time, f_T and h_{FE} .
(x, Δ, o, ● showing the quantity of transistor & distribution)

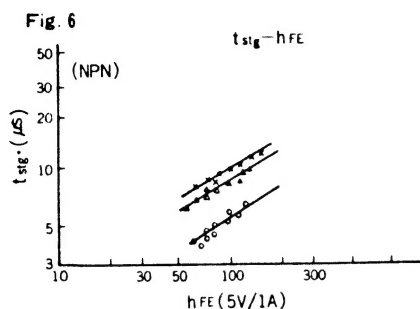



Next, the following Figs show that the relation between high f_T of power transistor and short period of t_{sig} influences the improvement of distortion (THD) effectively in audio amplifier. Fig. 9), 10) show the THD becomes better when t_{sig} is faster. Fig. 11), 12) illustrate the relation between output current wave-form of emitter and distortion wave-form. From these Figs, it is

obvious when the f_T of power transistor is low the output current wave-form becomes dull, and the switching function at B class push-pull operation is not performed precisely. These above phenomenon causes the increase of operating current and deterioration of distortion.

- Output wave-form & distortion wave-form near at clipping point.

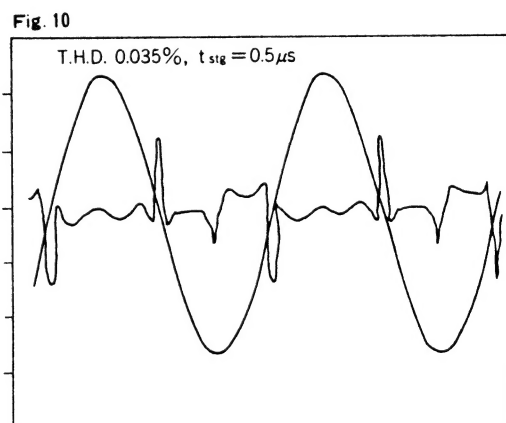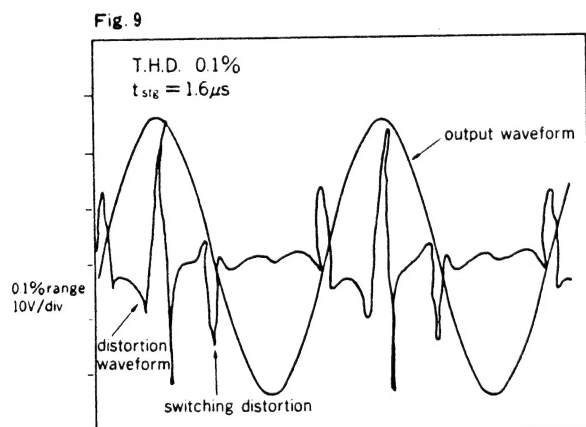

- Wave-forms of emitter current and distortion

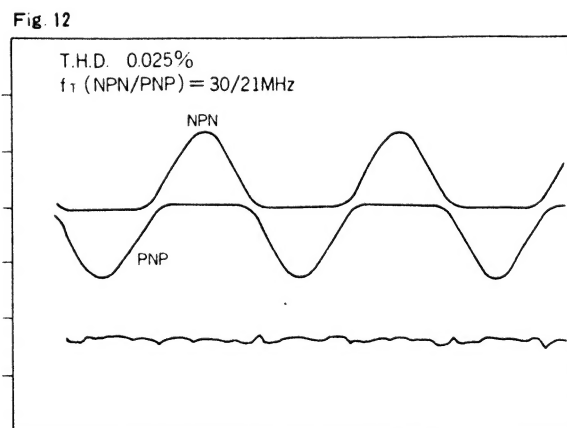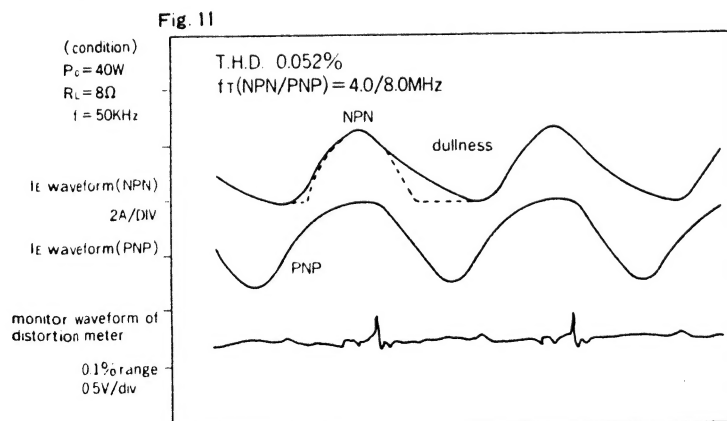

3. PARTS LOCATION & PARTS LIST


3-1. F-2917 MC Head Amp L-CH Circuit Board (Stock No. 7551421)

3-2. F-2918 MC Head Amp R-CH Circuit Board (Stock No. 7551431)

Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the Common Parts List for capacitors & resistors which was appended previously to each Sansui Manual.

Parts List



Parts No.	Stock No.	Description	Position
•Transistor			
TR01	0301090.1	2SA992 F.E	F 2917 F 2918
TR02	0306740.1	2SC1845 F.E	2B 4A
TR03	0306740.1	2SC1845 F.E	2A 4B
TR04	0301090.1	2SA992 F.E	1B 3A
TR05	0306740.1	2SC1845 F.E	1A 3B
TR06	0301090.1	2SA992 F.E	1B 3A
TR07	0306740.1	2SC1845 F.E	1A 3B
TR08	0303331.2	2SD357 D.E	1B 3A
TR09	0303331.2	2SD357 D.E	1A 3B
•FET			
FET01 ~ 07	0370334 ~ 7	2SK163M1 M2 N1 N2 2B	4A
FET08 ~ 14	0370334 ~ 7	2SJ44M1 M2 N1 N2 2A	4B
•Varistor			
D 01	0340170	MV103	1B 3A
D 02	0340170	MV103	1B 3A
•Capacitor			
C 01	0622102	1000pF 125V P.C	2B 4A
C 04	0681014	0.047μF 400V P.C	1A 3A
C 10	0622102	1000pF 125V P.C	1B 3A
C 11	0622102	1000pF 125V P.C	1A 3B
C 12	0623300	30μF 125V P.C	1B 3A
C 13	0623300	30μF 125V P.C	1A 3B
C 14 16	0621008	1μF 100V M.C	1B 3A
C 17	0622102	1000pF 125V P.C	1B 3A
C 25 ~ 29	0681018	0.22μF M.C	
•Resistor			
R 01	0280221	220Ω 1/3W C.R	2B 4A
R 02	0280109	1Ω 1/3W C.R	2B 4A
R 03	0280109	1Ω 1/3W C.R	2B 4A
R 04	0280109	1Ω 1/3W C.R	2A 4B
R 05	0280109	1Ω 1/3W C.R	2A 4B
R 06 ~ 19	0280565	5.6Ω 1/3W C.R	2A 4A, B
R 20	0280224	220Ω 1/3W C.R	2A 4B
R 22	0280120	12Ω 1/3W C.R	2B 4B
R 23	0280120	12Ω 1/3W C.R	2A 4A
R 26	0280151	150Ω 1/3W C.R	2B 4A
R 27	0280151	150Ω 1/3W C.R	2B 4B
R 28	0280101	100Ω 1/3W C.R	2B 4A
R 29	0280101	100Ω 1/3W C.R	2A 4B
R 30, 31	0212150	15Ω 2W N.I.R	2B 2A 4A 4B
R 34	0280561	560Ω 1/3W C.R	1B 3A
R 35	0280511	510Ω 1/3W C.R	1A 3B
R 36	0280224	220Ω 1/3W C.R	2B 4A
R 37	0280221	220Ω 1/3W C.R	1B 3A
R 38	0280221	220Ω 1/3W C.R	1A 3B
R 39	0280479	4.7Ω 1/3W C.R	1A 3B
R 40	0280152	150Ω 1/3W C.R	1B 3A
R 41	0280152	150Ω 1/3W C.R	1A 3B
R 42	0280391	390Ω 1/3W C.R	1B 3A
R 43	0280391	390Ω 1/3W C.R	1A 3B
R 44	0280479	4.7Ω 1/3W C.R	1B 3A
R 45	0280479	4.7Ω 1/3W C.R	1A 3B
R 46	0210478	0.47Ω 1/2W N.I.R	1B 3A
R 47	0210478	0.47Ω 1/2W N.I.R	1A 3B
R 48	0280101	100Ω 1/3W C.R	1B 3A
R 49	0280221	220Ω 1/3W C.R	2B 4A
R 50	0280524	820Ω 1/3W C.R	
VR01	1033570	100Ω B Center DC 0V Adj.	1A 3B

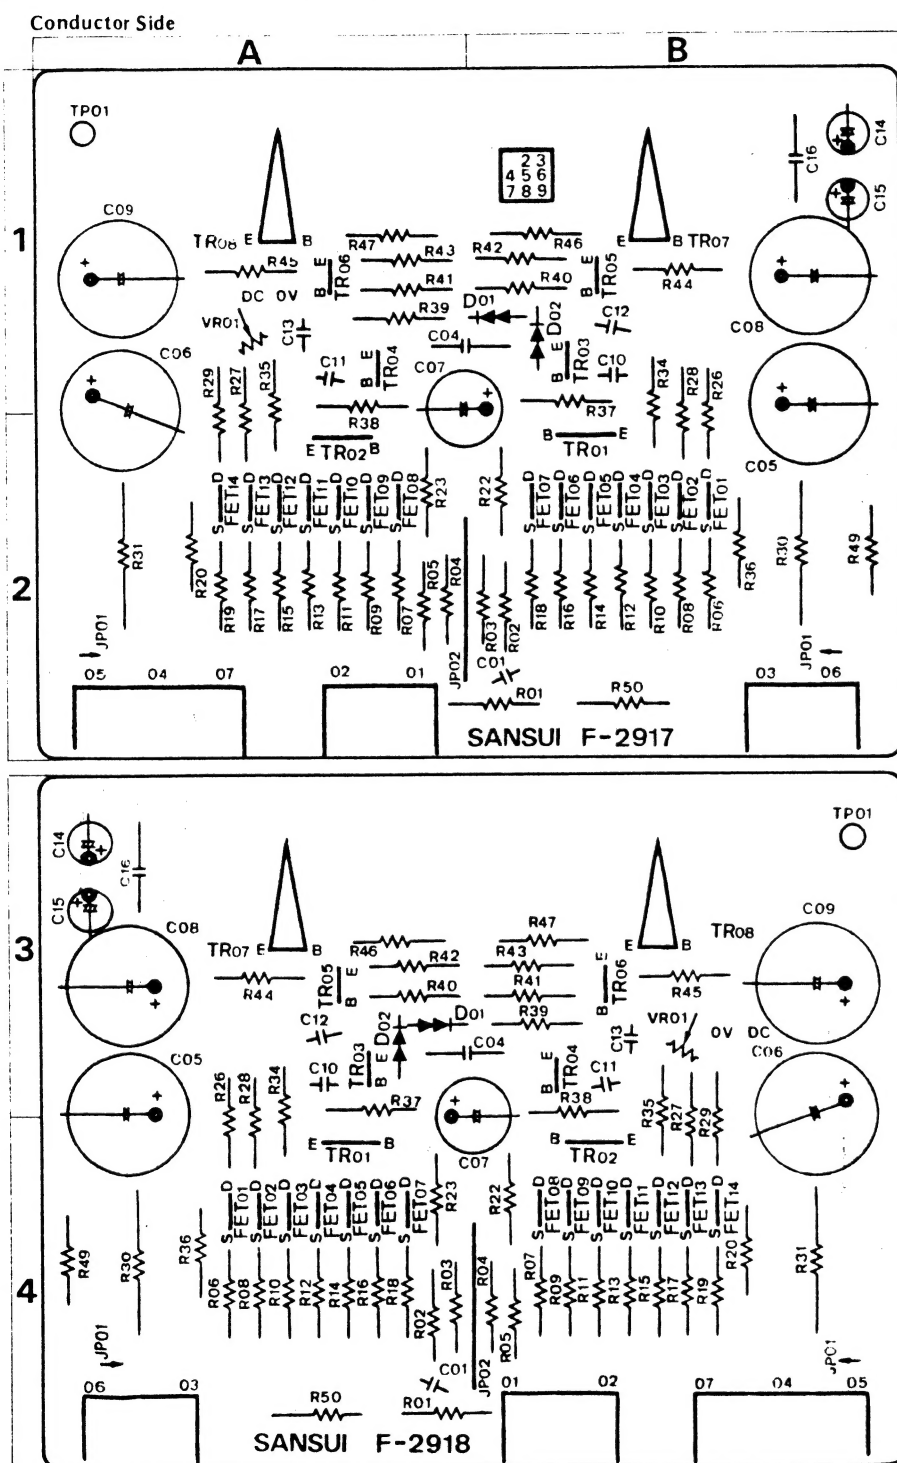

3-3. F-2770 Equalizer Amp L-CH Circuit Board (Stock No. 7551441)

3-4. F-2771 Equalizer Amp R-CH Circuit Board (Stock No. 7551451)

Conductor Side

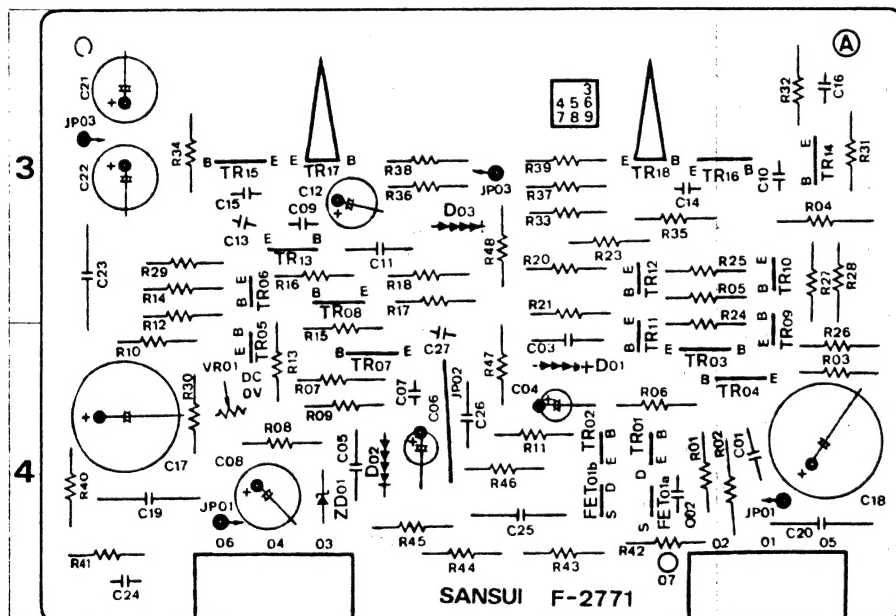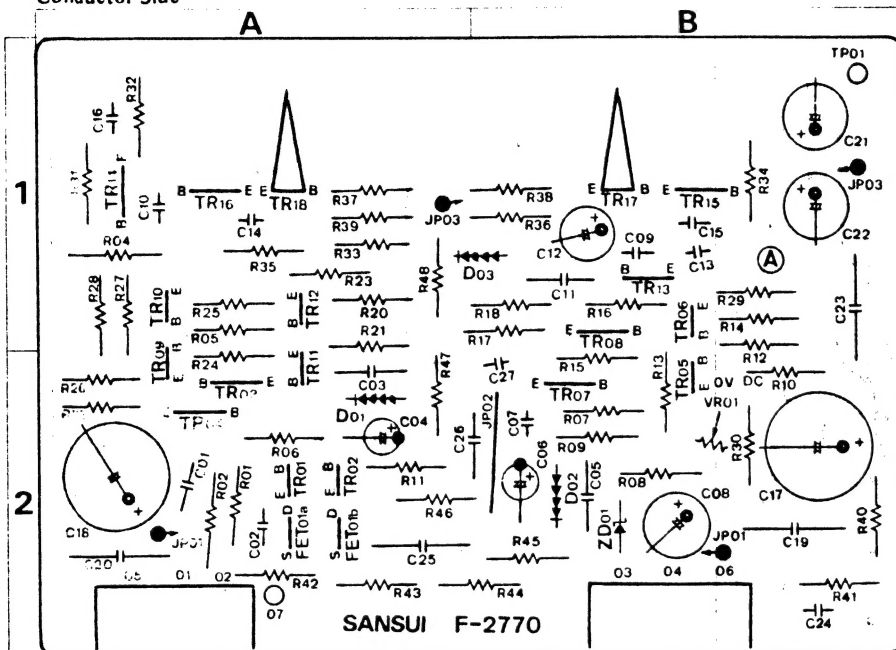


Parts List

Parts No.	Stock No.	Description	Position
•Transistor			
TR01	0306740.1	2SC1845 F.E	F-2770 2A
TR02	0306740.1	2SC1845 F.E	F-2771 4B
TR03	0301090.1	2SA992 F.E	2A 4B
TR04	0306360.1	2SC1951 1.2	2A 4B
TR05	0306740.1	2SC1845 F.E	2B 4A
TR06	0306740.1	2SC1845 F.E	1B 2A
TR07	0306740.1	2SC1845 F.E	2B 4A
TR08	0306740.1	2SC1845 F.F	1B 3A
TR09	0301090.1	2SA992 F.E	2A 4B
TR10	0301090.1	2SA992 F.E	1A 3B
TR11	0301090.1	2SA992 F.E	2A 4B
TR12	0301090.1	2SA992 F.E	1A 3B
TR13	0300760.2	2SA917 1.2	1B 3A
TR14	0306360.1	2SC1951 1.2	1A 3B
TR15	0306740.1	2SC1845 F.E	1B 3A
TR16	0301090.1	2SA992 F.E	1A 3B
TR17	0308501.2	2SD357 D.E	1B 3A
TR18	0303331.2	2SB527 D.E	1A 3B
•FET			
FET01	0370321	2SK131 L.M	2A 4B
•Diode			
D 01	0310480	SV03	2A 4B
D 02	0310480	SV03	2B 4A
D 03	0310480	SV03	1B 3A
•Zener Diode			
ZD01	0316570	RD33E B	2B 4A
C 01	0622151	150pF 125V P.C	2A 4B
C 02	0623200	20pF 125V P.C	2A 4B
C 03	0681014	0.047uF 400V M.C	2A 4B
C 04	0681014	0.047uF 400V M.C	2B 4A
C 05	0622362	3600pF 125V P.C	2B 4A
C 06	0623300	30pF 125V P.C	1B 3A
C 07	0623300	30pF 125V P.C	1A 3B
C 08	0681014	0.047uF 400V M.C	1B 3A
C 09	0622102	1000pF 125V P.C	1B 3A
C 10	0622102	1000pF 125V P.C	1A 3B
C 11	0623200	20pF 125V P.C	1B 3A
C 12	0623200	20pF 125V P.C	1A 3B
C 13	0681001	0.47uF 250V M.C	2B 4A
C 14	0681001	0.47uF 250V M.C	2A 4B
C 15	0681001	0.47uF 250V M.C	1B 3A
C 16	0622332	3300pF 125V P.C	2B 4A
C 17	0682037	0.12uF 100V M.C	2A 4B
C 18	0682023	0.033uF 100V M.C	2A, B 4B
C 19	0622202	2000pF 125V P.C	2B 4A
R 01	0280563	56kΩ 1/3W C.R	2A 4B
R 02	0280330	33Ω 1/3W C.R	2A 4B
R 03	0210182	1.8kΩ 1/2W N.I.R	2A 4B
R 04	0280333	33kΩ 1/3W C.R	1A 3B
R 05	0280564	560kΩ 1/3W C.R	1A 3B
R 06	0280103	10kΩ 1/3W C.R	2A 4B
R 07	0231182	1.8kΩ 1/2W M.R	2B 4A
R 08	0231182	1.8kΩ 1/2W M.R	2B 4A
R 09	0280470	47Ω 1/3W C.R	2B 4A
R 10	0210102	1kΩ 1/2W N.I.R	2B 4A
R 11	0280393	39kΩ 1/3W C.R	2A 4B
R 12	0280821	820Ω 1/3W C.R	1B 3A
R 13	0280101	100Ω 1/3W C.R	2B 4A
R 14	0280821	820Ω 1/3W C.R	1B 3A
R 15	0280101	100Ω 1/3W C.R	2B 4A
R 16	0280101	100Ω 1/3W C.R	1B 3A
R 17	0280151	150Ω 1/3W C.R	1B 3A
R 18	0280151	150Ω 1/3W C.R	1B 3A
R 19	0280330	33Ω 1/3W C.R	1A 3B
R 20	0280151	150Ω 1/3W C.R	1A 3B
R 21	0280151	150Ω 1/3W C.R	1A 3B
R 22	0280101	100Ω 1/3W C.R	2A 4B
R 23	0280101	100Ω 1/3W C.R	1A 3B
R 24	0280821	820Ω 1/3W C.R	2A 4B
R 25	0280101	100Ω 1/3W C.R	1A 3B
R 26	0280821	820Ω 1/3W C.R	1A 3B
R 27	0280101	100Ω 1/3W C.R	1A 3B
R 28	0280821	820Ω 1/3W C.R	1A 3B
R 29	0280121	120Ω 1/3W C.R	1B 3A
R 30	0280393	39kΩ 1/3W C.R	2B 4A
R 31	0280393	39kΩ 1/3W C.R	1A 3B
R 32	0280121	120Ω 1/3W C.R	1A 3B
R 33	0280121	120Ω 1/3W C.R	1A 3B
R 34	0280391	390Ω 1/3W C.R	1B 3A
R 35	0280391	390Ω 1/3W C.R	1A 3B
R 36	0280331	330Ω 1/3W C.R	1B 3A
R 37	0280331	330Ω 1/3W C.R	1A 3B
R 38	0280180	18Ω 1/3W C.R	1B 3A
R 39	0280180	18Ω 1/3W C.R	1A 3B
R 40	0280561	560Ω 1/3W C.R	2B 4A
R 41	0280104	100kΩ 1/3W C.R	2B 4A
R 42	0280330	33Ω 1/3W C.R	2A 4B
R 43	0280229	2.2Ω 1/3W C.R	2A 4B
R 44	0231203	20kΩ 1/2W M.R	2B 4A
R 45	0231682	6.8kΩ 1/2W M.R	2B 4A
R 46	0231182	1.8kΩ 1/2W M.R	2A 4B
R 47	0231391	390Ω 1/2W M.R	2A 4B
R 48	0280330	33Ω 1/3W C.R	1A 3B
VR01	1033890	470Ω B Center DC 0V Adj	2B 4A

3-5. F-2819 Flat Amp Circuit Board (Stock No. 7562781)

Conductor Side

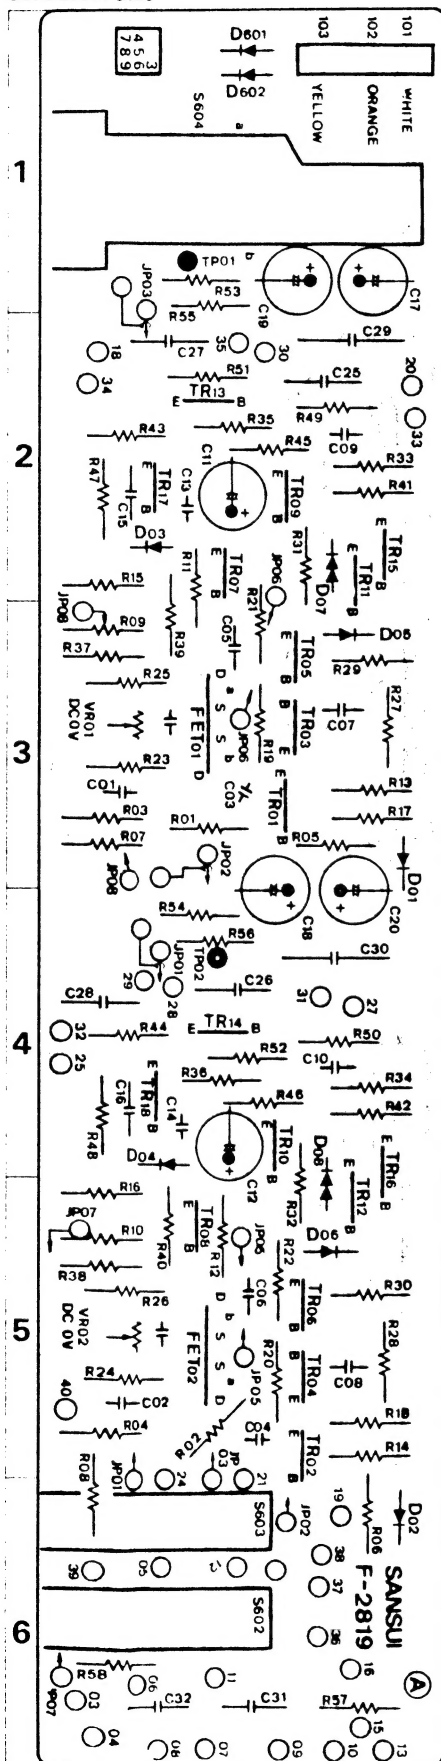


Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
•Transistor				R 07, 08	0280104	100k Ω 1/3W C.R.	3.6
TR01, 02	0301090	2SA692 F.E	3.5	R 09, 10	0280823	82k Ω 1/3W C.R.	3.5
TR03, 04	0306740, 1	2SC1845 F.E	3.5	R 13, 14	0280562	5.6k Ω 1/3W C.R.	3.5
TR05, 06	0306740, 1	2SC1845 F.E	3.5	R 15, 16	0280821	820 Ω 1/3W C.R.	2.5
TR07, 08	0306740	2SC1845 F.E	2.5	R 17, 18	0280222	2.2k Ω 1/3W C.R.	3.5
TR09, 10	0301090, 1	2SA982 F.E	2.4	R 19, 20	0280102	1k Ω 1/3W C.R.	3.5
TR11, 12	0300760, 1	2SA917-1, 2	2.5	R 21, 22	0280103	10k Ω 1/3W C.R.	3.5
TR13, 14	0306360, 1	2SC1951-1	2.4	R 23, 24	0280470	47 Ω 1/3W C.R.	3.5
TR15, 16	0306360, 1	2SC1951-1, 2	2.4	R 25, 26	0280470	47 Ω 1/3W C.R.	3.5
TR17, 18	0300760, 1	2SA917-1, 2	2.4	R 27, 28	0280152	1.5k Ω 1/3W C.R.	3.5
				R 29, 30	0280222	2.2k Ω 1/3W C.R.	3.5
•FET				R 31, 32	0280331	330 Ω 1/3W C.R.	2.5
FET01, 02	0370361, 2	UPA68H L1, L2	3.5	R 33, 34	0280222	2.2k Ω 1/3W C.R.	2.4
•Diode				R 35, 36	0280222	2.2k Ω 1/3W C.R.	2.4
D 01, 02	0316390	RD6.2E B	3.6	R 37, 38	0280272	2.7k Ω 1/3W C.R.	3.5
D 03, 04	0316390	RD6.2E B	2.4	R 39, 40	0280272	2.7k Ω 1/3W C.R.	3.5
D 05, 06	0311160	1S2473D	3.5	R 41, 42	0280681	680 Ω 1/3W C.R.	2.4
D 07, 08	0340150	MV 12	2.5	R 43, 44	0280681	680 Ω 1/3W C.R.	2.4
D 601, 602	0310340	10D1	1	R 45, 46	0280151	150 Ω 1/3W C.R.	2.4
C 01, 02	0623300	30pF 125V P.C.	3.5	R 47, 48	0280822	8.2k Ω 1/3W C.R.	2.4
C 07, 08	0622152	1500pF 125V P.C.	3.5	R 49, 50	0280820	82 Ω 1/3W C.R.	2.4
C 09, 10	0623100	10pF 125V P.C.	2.4	R 51, 52	0280820	82 Ω 1/3W C.R.	2.4
C 13, 14	0681014	0.047 μ F 400V M.C.	2.4	R 53, 54	0280154	150k Ω 1/3W C.R.	1.4
C 15, 16	0623309	30pF 125V P.C.	2.4	R 55, 56	0280221	220 Ω 1/3W C.R.	1.4
C 25, 26	0681018	0.22 μ F 400V M.C.	2.4	R 57, 58	0280824	820k Ω 1/3W C.R.	6
C 27, 28	0681018	0.22 μ F 400V M.C.	2.4	R 59 ~ 62	0280224	220k Ω 1/3W C.R.	
C 29, 30	0681001	0.47 μ F 250V M.C.	2.4				
C 31, 32	0681018	0.22 μ F 400V M.C.	6				
R 01, 02	0280101	100 Ω 1/3W C.R.	3.5	VR01, 02	1034150	100 Ω B Center DC 0V Adj.	3.5
R 03, 04	0280823	82k Ω 1/3W C.R.	3.5	S 602	1131R10	Jump & Subsonic Filter Switch	6
				S 604	1190640	Speakers Switch	1

3-6. F-2773 Muting Circuit Board (Stock No. 7597401)


Conductor Side

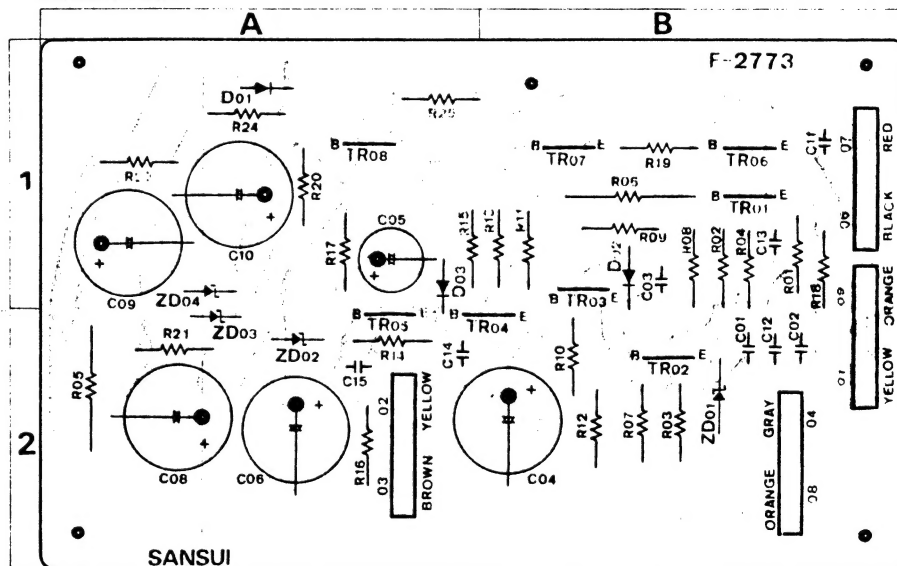

Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
•Transistor				R 03	0280101	100 Ω 1/3W C.R.	2B
TR01	0305951, 2	2SC945 O.P	1B	R 04	0280472	4.7k Ω 1/3W C.R.	1B
TR02	0305951, 2	2SC945 O.P	2B	R 05	0212220	22 Ω 2W N.I.R.	2A
TR03	0305951, 2	2SC945 O.P	1B	R 06	0212152	1.5k Ω 2W N.I.R.	1B
TR04	0305951, 2	2SC945 O.P	2B	R 07	0280333	33k Ω 1/3W C.R.	2B
TR05	0305951, 2	2SC945 O.P	2A	R 08	0280473	4.7k Ω 1/3W C.R.	1B
TR06	0305951, 2	2SC945 O.P	1B	R 09	0280472	4.7k Ω 1/3W C.R.	1B
TR07	0305951, 2	2SC945 O.P	1B	R 10	0280471	560 Ω 1/3W C.R.	2B
TR08	0305951, 2	2SC945 O.P	1A	R 11	0280184	18k Ω 1/3W C.R.	1B
				R 12	0280223	2.2k Ω 1/3W C.R.	2B
•Diode				R 13	0280222	2.2k Ω 1/3W C.R.	1B
D 01	0310340	10D1	1A	R 14	0280642	6.8k Ω 1/3W C.R.	2A
D 02	0311160	1S2473D	1B	R 15	0280223	2.2k Ω 1/3W C.R.	1A
D 03	0311160	1S2473D	1A	R 16	0280273	2.7k Ω 1/3W C.R.	2A
				R 17	0280222	2.2k Ω 1/3W C.R.	1A
•Zener Diode				R 18	0280101	100 Ω 1/3W C.R.	1B
ZD01	0316520	RD24E C	2B	R 19	0280221	220 Ω 1/3W C.R.	1B
ZD02	0316290	RD12E B	2A	R 20	0280471	4.7k Ω 1/3W C.R.	1A
ZD03	0316520	RD24E C	2A	R 21	0280123	12k Ω 1/3W C.R.	2A
ZD04	0316520	RD24E C	1A	R 22	0280153	15k Ω 1/3W C.R.	1A
R 01	0280101	100 Ω 1/3W C.R.	1B	R 23	0280101	100 Ω 1/3W C.R.	
R 02	0280471	470 Ω 1/3W C.R.	1B	R 24	0280472	4.7k Ω 1/3W C.R.	1A
				R 25	0280101	100 Ω 1/3W C.R.	1A


3-7. F-2775 Driver Amp Circuit Board (Stock No. 7572191)

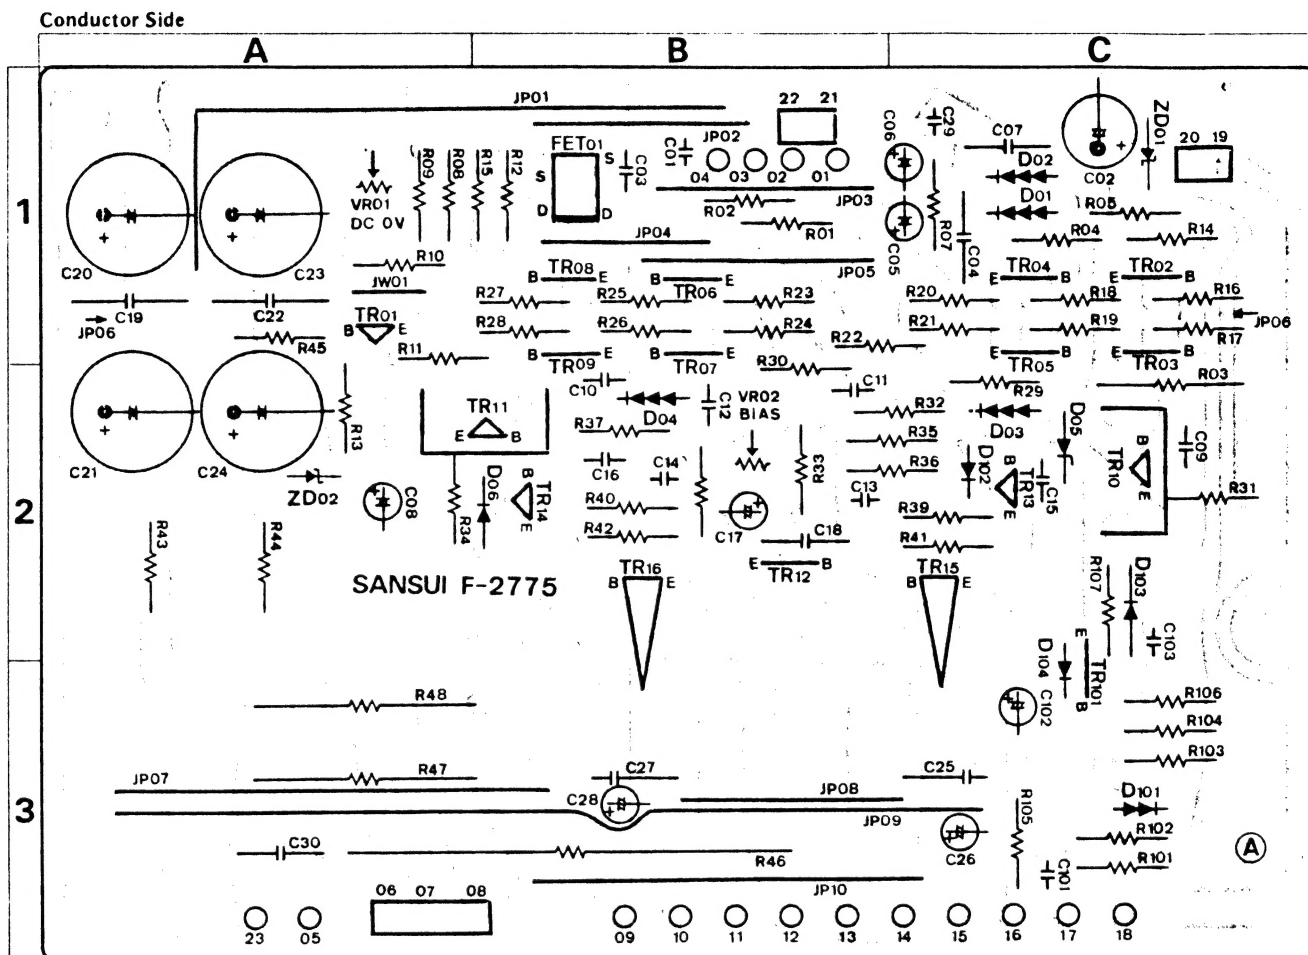

Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
•Transistor				C 04	0681013	0.033 μ F 400V M.C.	1C	R 23	0280121	120 Ω 1/3W C.R.	1B
TR01	0306680.1	2SC2071 B.V	1A	C 07	0681013	0.033 μ F 400V M.C.	1C	R 24	0280121	120 Ω 1/3W C.R.	1B
TR02	0306740.1	2SC1845 F.E	1C	C 09	0623309	3pF 125V P.C.	2C	R 25	0280101	100 Ω 1/3W C.R.	1B
TR03	0306740.1	2SC1845 F.E	1C	C 10	0623309	3pF 125V P.C.	2B	R 26	0280101	100 Ω 1/3W C.R.	1B
TR04	0306740.1	2SC1845 F.E	1C	C 11	0623109	1pF 125V P.C.	2B	R 27	0280821	820 Ω 1/3W C.R.	1B
TR05	0306740.1	2SC1845 F.E	1C	C 12	0623109	1pF 125V P.C.	2B	R 28	0280821	820 Ω 1/3W C.R.	1B
TR06	0301090.1	2SA992 F.E	1B	C 13	0622102	1000pF 125V P.C.	2B	R 29	0280393	39k Ω 1/3W C.R.	2C
TR07	0301090.1	2SA992 F.E	1B	C 14	0622102	1000pF 125V P.C.	2B	R 30	0280393	39k Ω 1/3W C.R.	2C
TR08	0301090.1	2SA992 F.E	1B	C 15	0623330	33pF 125V P.C.	2C	R 31	0280151	150 Ω 1/3W C.R.	2A
TR09	0301090.1	2SA992 F.E	1B	C 16	0623330	33pF 125V P.C.	2C	R 32	0280472	47k Ω 1/3W C.R.	2C
TR10	0301030.1	2SA939 B.V	2C	C 18	0681013	0.033 μ F 400V M.C.	2B	R 33	0280681	680 Ω 1/3W C.R.	2B
TR11	0306680.1	2SC2071 B.V	2B	C 19	0681018	0.22 μ F 400V M.C.	1A	R 34	0280151	150 Ω 1/3W C.R.	2A
TR12	0306740.1	2SC1845 F.E	2B	C 22	0681018	0.22 μ F 400V M.C.	1A	R 35	0280560	560 Ω 1/3W C.R.	2C
TR13	0306680.1	2SC2071 B.V	2C	C 29	0622681	680pF 125V P.C.	1C	R 36	0280391	390 Ω 1/3W C.R.	2C
TR14	0301030.1	2SA939 B.V	2B	C 30	0681014	0.47 μ F 400V M.C.	3A	R 37	0280391	390 Ω 1/3W C.R.	2B
TR15	0306660.1	2SC2238LB O.Y	2C					R 38	0280103	10k Ω 1/3W C.R.	2B
TR16	0301020.1	2SA968LB O.Y	2B					R 39	0210561	560 Ω 1/2W N.I.R.	2C
TR101	0306740.1	2SC1845 F.E	3C					R 40	0210561	560 Ω 1/2W N.I.R.	2C
•FET				R 01	0280104	100k Ω 1/3W C.R.	1B	R 41	0210470	47 Ω 1/2W N.I.R.	2C
FET01	0370251	2SK97	1B	R 02	0280681	680 Ω 1/3W C.R.	1B	R 42	0210470	47 Ω 1/2W N.I.R.	2B
•Diode				R 03	0212272	27k Ω 2W N.I.R.	2C	R 43	0210120	12 Ω 1/2W N.I.R.	2A
D 01	0310480	SV03	1C	R 04	0231392	3.9k Ω 1/2W C.R.	1C	R 44	0210120	12 Ω 1/2W N.I.R.	2A
D 02	0310480	SV03	1C	R 05	0231392	3.9k Ω 1/2W C.R.	1C	R 45	0280273	27k Ω 1/3W C.R.	1A
D 03	0310480	SV03	2C	R 07	0280471	470 Ω 1/3W C.R.	1C	R 46	0207100	10 Ω 7W N.I.R.	3B
D 04	0310480	SV03	2B	R 08	0280470	47 Ω 1/3W C.R.	1A	R 47	0213392	3.9k Ω 3W N.I.R.	3A
D 05	0310340	10D1	2C	R 09	0280470	47 Ω 1/3W C.R.	1A	R 48	0213392	3.9k Ω 3W N.I.R.	3A
D 06	0310340	10D1	2B	R 10	0280470	47 Ω 1/3W C.R.	1A	R 101	0280104	100k Ω 1/3W C.R.	3C
D 101	0340150	MV12	3C	R 11	0280152	15k Ω 1/3W C.R.	1A	R 102	0280223	22k Ω 1/3W C.R.	3C
D 102	0311160	1S2473D	2C	R 12	0280331	330 Ω 1/3W C.R.	1B	R 103	0280680	680 Ω 1/3W C.R.	3C
D 103	0310400	1N34A	2C	R 13	0280392	39k Ω 1/3W C.R.	2A	R 104	0280393	39k Ω 1/3W C.R.	3C
D 104	0311160	1S2473D	2C	R 14	0280101	100 Ω 1/3W C.R.	1C	R 105	0280222	2.2k Ω 1/3W C.R.	3C
•Zener Diode				R 15	0280101	100 Ω 1/3W C.R.	1B	R 106	0280523	82k Ω 1/3W C.R.	3C
ZD01	0317190	RD27E (B)	1C	R 16	0280821	820 Ω 1/3W C.R.	1C	R 107	0280822	8.2k Ω 1/3W C.R.	2C
ZD02	0316310	RD13E B	2A	R 17	0280821	820 Ω 1/3W C.R.	1C				
C 01	0622101	100 μ F 125V P.C.	1B	R 18	0280101	100 Ω 1/3W C.R.	1C				
C 03	0623220	22 μ F 125V P.C.	1B	R 19	0280101	100 Ω 1/3W C.R.	1C				
				R 20	0280121	120 Ω 1/3W C.R.	1C				
				R 21	0280121	120 Ω 1/3W C.R.	1C				
				R 22	0280820	82 Ω 1/3W C.R.	1B				
								VR01	1033570	100 Ω B 2.5x2 Center DC 0V Adj.	1A
								VR02	1033630	1k Ω B 2.5x2 Bias Current Adj.	2B

3-8. F-2781 Power Supply & Protector Circuit Board (Stock No. 7503261)

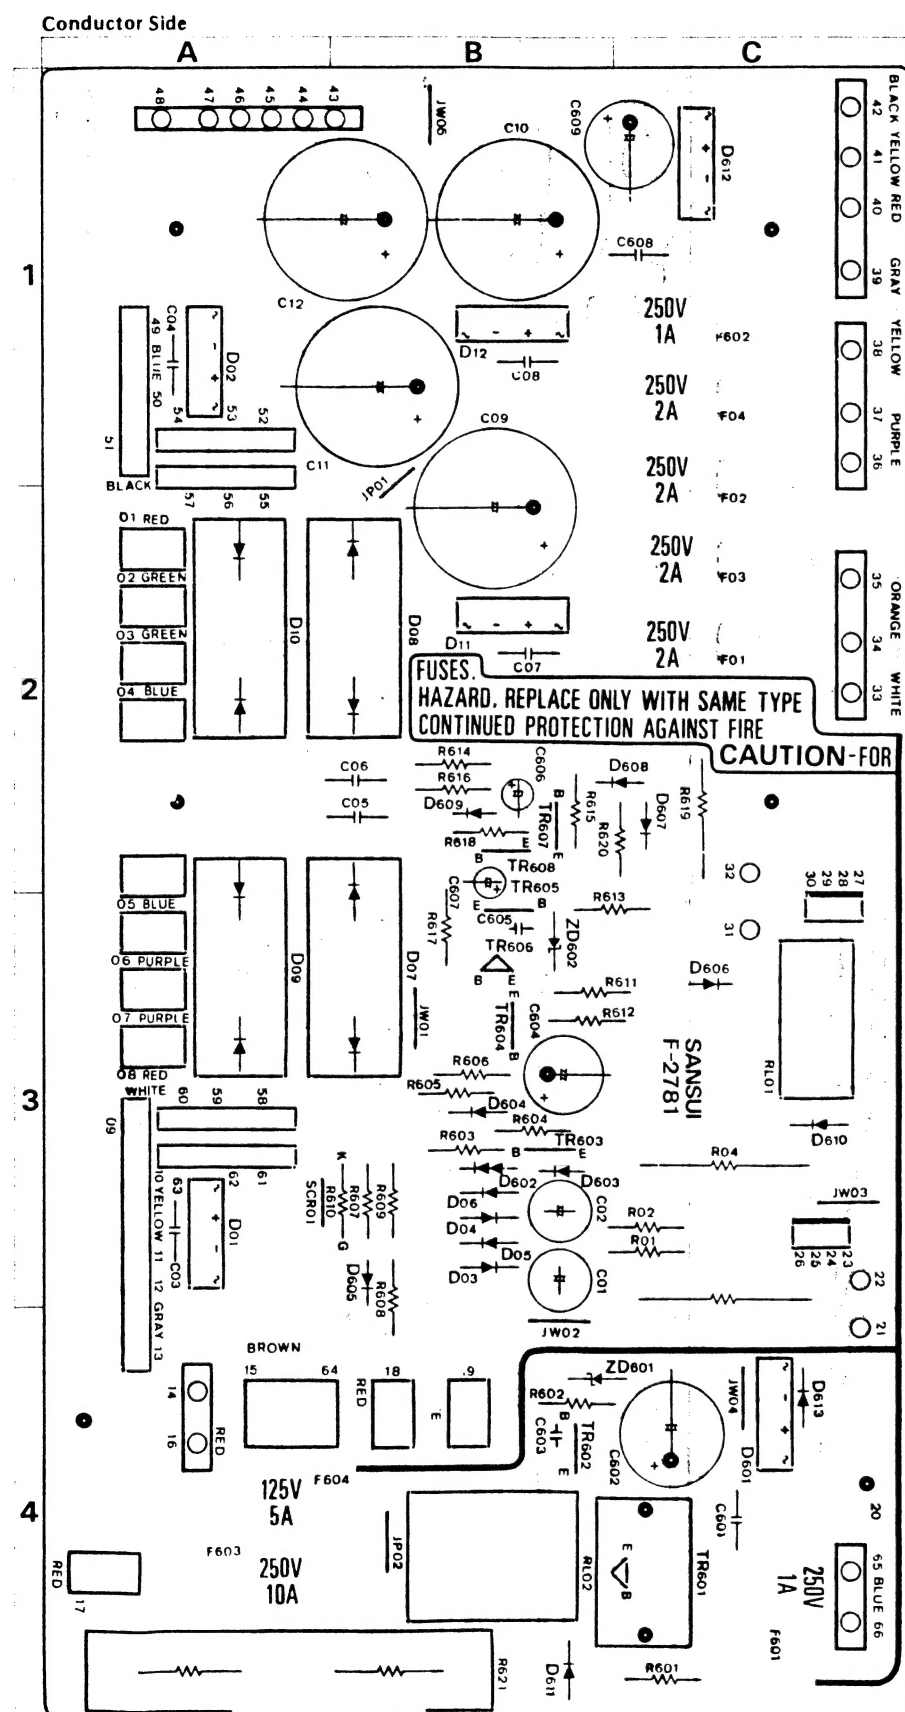


Parts List

Parts No.	Stock No.	Description	Position
•Transistor			
TR601	0308611.2	2SD357 D, E	4C
TR602	0305951.2	2SC945 Q, P	4B
TR603	0305951.2	2SC945 Q, P	3B
TR604	0305951.2	2SC945 Q, P	3B
TR605	0305951.2	2SC945 Q, P	3B
TR606	0308611.2	2SD357 D, E	3B
TR607	0305951.2	2SC945 Q, P	2B
TR608	0305951.2	2SC945 Q, P	2B
•Diode			
D 01, 02	0311700	RR152	3A 1A
D 03, 04	0311160	1S2473D	3B
D 05, 06	0311160	1S2473D	3B
D 07, 08	0311310	SS5	3B, 2B
D 09, 10	0211320	SS5R	3A, 2A
D 11	0311700	RR152	2B
D 12	0311700	RR152	1B
D 601	0311700	RR152	4C
D 602	0340150	MV12	3B
D 603	0311160	1S2473D	3B
D 604	0311160	1S2473D	3B
D 605	0311160	1S2473D	3B
D 606	0311160	1S2473D	3C
D 607	0311160	1S2473D	2C
D 608	0311160	1S2473D	2C
D 609	0311160	1S2473D	2B
D 610	0310340	10D1	3C
D 611	0310340	10D1	4B
D 612	0311700	RR152	1C
D 613	0310340	10D1	4C
•Zener Diode			
ZD601	0316510	RD24E B	4B
ZD602	0316390	RD6.2E B	3B
•SCR			
SCR601	0350020	2SF656	
C 03, 04	0606108	0.1 μ F 250V M C	3A, 1A
C 05, 06	0606108	0.1 μ F 250V M C	2B
C 07	0606108	0.1 μ F 250V M C	2B
C 08	0606108	0.1 μ F 250V M C	1B
C 09	0548001	4700 μ F 25V E C	2B
C 10	0548001	4700 μ F 25V E C	1B
C 11	0548001	4700 μ F 25V E C	1B
C 12	0548001	4700 μ F 25V E C	1A
C 601	0606108	0.1 μ F 250V M C	4C
C 608	0606108	0.1 μ F 250V M C	1C
R 01, 02	0280223	22 Ω 1/3W C R	3C
R 03, 04	0135221	220 Ω 5W Ce R	3C
R 601	0210829	8 2 Ω 1W N I R	4C
R 602	0210102	1k Ω 1/2W N I R	4B
R 603	0280474	470 Ω 1/3W C R	3B
R 604	0280334	330k Ω 1/3W C R	3B
R 605	0280104	100k Ω 1/3W C R	3B
R 606	0280393	39k Ω 1/3W C R	3B
R 607	0280330	33 Ω 1/3W C R	3B
R 608	0280472	47k Ω 1/3W C R	3B
R 609	0280183	18k Ω 1/3W C R	3B
R 610	0280102	1k Ω 1/3W C R	3B
R 611	0280330	33 Ω 1/3W C R	3B
R 612	0280330	33 Ω 1/3W C R	3B
R 613	0280473	47k Ω 1/3W C R	3B, C
R 614	0280682	6.8k Ω 1/3W C R	2B
R 615	0280474	470k Ω 1/3W C R	2B
R 616	0280104	100k Ω 1/3W C R	2B
R 617	0280104	100k Ω 1/3W C R	2B
R 618	0280474	470k Ω 1/3W C R	2B
R 619	0212152	1.5k Ω 2W N I R	2C
R 620	0280121	120 Ω 1/3W C R	2C
R 621	0159160	3.9 Ω 20W Ce R	4B
RL01	1150430	Relay	3C
RL02	1150360	Relay	4B
F 01	0432240	AC Fuse 2A 250V	2C
F 02	0432240	AC Fuse 2A 250V	2C
F 03	0432240	AC Fuse 2A 250V	2C
F 04	0432240	AC Fuse 2A 250V	1C
F 601	0432220	AC Fuse 1A 250V	4C
F 602	0432220	AC Fuse 1A 250V	1C
F 603	0431320	AC Fuse 10A 250V	4A
F 604	0433290	AC Fuse 5A 125V	4A, B

3-9. F-2778 Regulated Power Supply Circuit Board (Stock No. 7503271)

Conductor Side

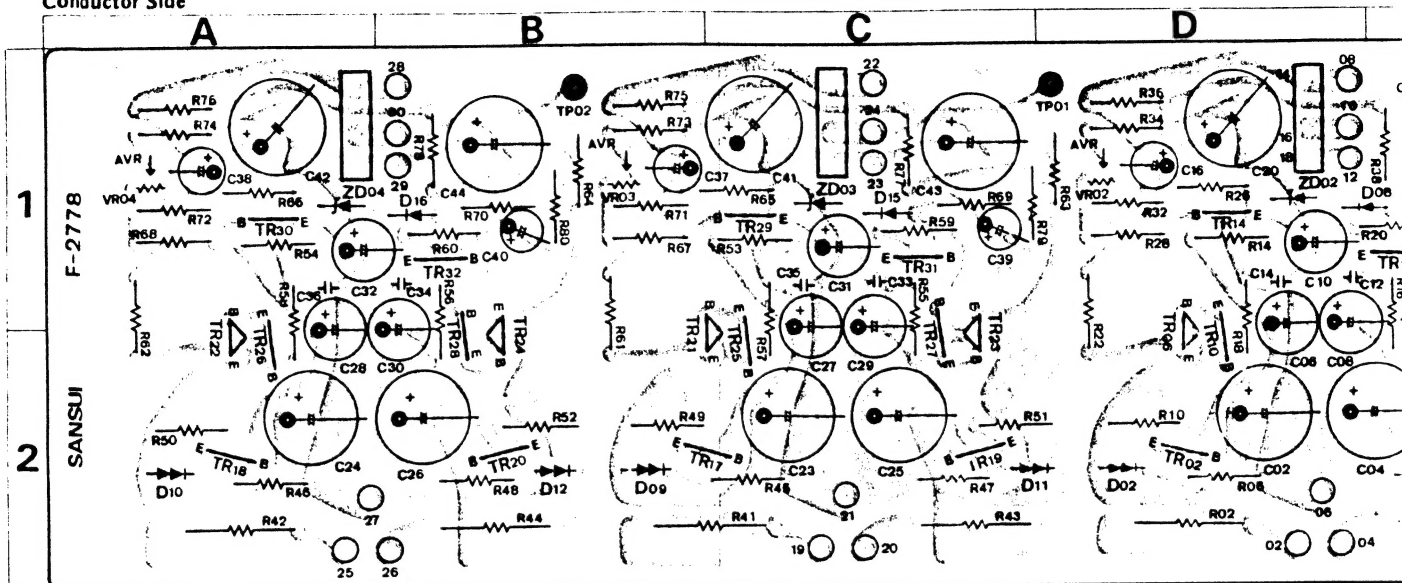


Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
•Transistor				D 03, 04	0340120	VD1212	2F, 2E	R 07, 08	0280333	33kΩ 1/3W C.R.	2F, 2E
TR01, 02	0301090, 1	2SA992 F, E	2E, 2D	D 07, 08	0311160	1S2473D	1F, 1E	R 09, 10	0191331	330Ω 1/4W F.R.	2E, 2D
TR03, 04	0306740, 1	2SC1845 F, E	2F, 2E	D 09, 10	0340120	VD1212	2B, 2A	R 11, 12	0191331	330Ω 1/4W F.R.	2F, 2E
TR05, 06	0306611, 2	2SD357 D, E	2E, 2D	D 11, 12	0340120	VD1212	2C, D, 2B	R 13, 14	0280472	47kΩ 1/3W C.R.	1F, 1D
TR07, 08	0303441, 2	2SB527 D, E	2F, 2E	D 15, 16	0311160	1S2473D	1C, 1B	R 15, 16	0280472	47kΩ 1/3W C.R.	1F, 1E
TR09, 10	0306740, 1	2SC1845 F, E	2E, F, 2D	D 604	0310340	10D1		R 17, 18	0280221	220Ω 1/4W C.R.	1F, 1D
TR11, 12	0301090, 1	2SA992 F, E	2F, 2E	D 605	0310340	10D1		R 19, 20	0280221	220Ω 1/4W C.R.	1F, 1E
TR13, 14	0306740, 1	2SC1845 F, E	1F, 1D	•Zener Diode				R 21, 22	0192479	47Ω 1/2W F.R.	1E, 1D
TR15, 16	0301090, 1	2SA992 F, E	1F, 1E	ZD01, 02	0316510	RD24E B	1F, 1D	R 25, 26	0280622	6.8kΩ 1/3W C.R.	1E, 1D
TR17, 18	0301090, 1	2SA992 F, E	2C, 2E	ZD03, 04	0316390	RD62E B	1C, 1A	R 27, 28	0280102	1kΩ 1/3W C.R.	1E, 1D
TR19, 20	0306740, 1	2SC1845 F, E	2C, 2B					R 29, 30	0280102	1kΩ 1/3W C.R.	1F, 1E
TR21, 22	0308611, 2	2SD357 D, E	2C, 2A	C 01, 02	0587331	330μF 80V E.C.	2F, 2D	R 31, 32	0280103	10kΩ 1/3W C.R.	1E, 1D
TR23, 24	0303441, 2	2SB527 D, E	2C, 2B	C 03, 04	0587331	330μF 80V E.C.	2F, 2E	R 33, 34	0280622	8.2kΩ 1/3W C.R.	1E, 1D
TR25, 26	0306740, 1	2SC1845 F, E	2C, 2A	C 05, 06	0587470	47μF 80V E.C.	1, 2F, 1, 2D	R 35, 36	0280181	180Ω 1/3W C.R.	1E, 1D
TR27, 28	0301090, 1	2SA992 F, E	2C, 2B	C 07, 08	0587470	47μF 80V E.C.	1, 2F, 1, 2D	R 37, 38	0280183	18kΩ 1/3W C.R.	1F, 1E
TR29, 30	0306740, 1	2SC1845 F, E	1C, 1A					R 39, 40	0280183	18kΩ 1/3W C.R.	1F, 1E
TR31, 32	0301090, 1	2SA992 F, E	1C, 1B	R 01, 02	0212101	100Ω 2W N.I.R.	2E, 2D	R 41, 42	0212120	12Ω 2W N.I.R.	2C, 2A
•Diode				R 03, 04	0212101	100Ω 2W N.I.R.	2F, 2E	R 43, 44	0212120	12Ω 2W N.I.R.	2C, 2B
D 01, 02	0340120	VD1212	2E, 2D	R 05, 06	0280333	33kΩ 1/3W C.R.	2E, 2D	R 45, 46	0280682	6.8kΩ 1/3W C.R.	2C, 2A
								R 47, 48	0280682	6.8kΩ 1/3W C.R.	2C, 2B

• Note: The circuit boards, F-2820, F-2772, F-2774, F-2776, F-2777 are not supplied as the assembled, the individual parts on the circuit board, however, are provided for orders.

3-10. F-2774 Buffer Amp Circuit Board

Conductor Side

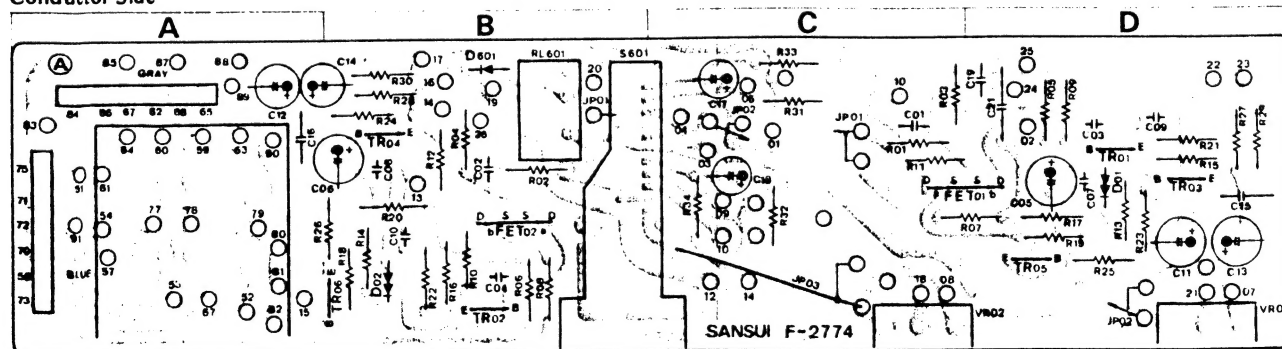


Parts List

Parts No.	Stock No.	Description	Position
R 31 ~ 34	0280474	470kΩ 1/3W C.R.	C
RL601	1150620	Relay	B
VR01, 02	1000360	50kΩ A	C, D
S 601	1190640	Power Amp Operation Switch	B
S 602	1104400	Tape Copy Switch	

Abbreviations

C.R.	: Carbon Resistor	E.C.	: Electrolytic Capacitor
S.R.	: Solid Resistor	BP.E.C.	: Bi-Polar Electrolytic Capacitor
Ca.R.	: Cement Resistor	C.C.	: Ceramic Capacitor
M.R.	: Metal Film Resistor	Mi.C.	: Mica Capacitor
F.R.	: Fusing Resistor	O.C.	: Oil Capacitor
N.I.R.	: Non-Inflammable Resistor	P.C.	: Polystyrene Capacitor
M.C.	: Mylar Capacitor	T.C.	: Tantalum Capacitor


3-11. F-2820 Speakers Relay Circuit Board

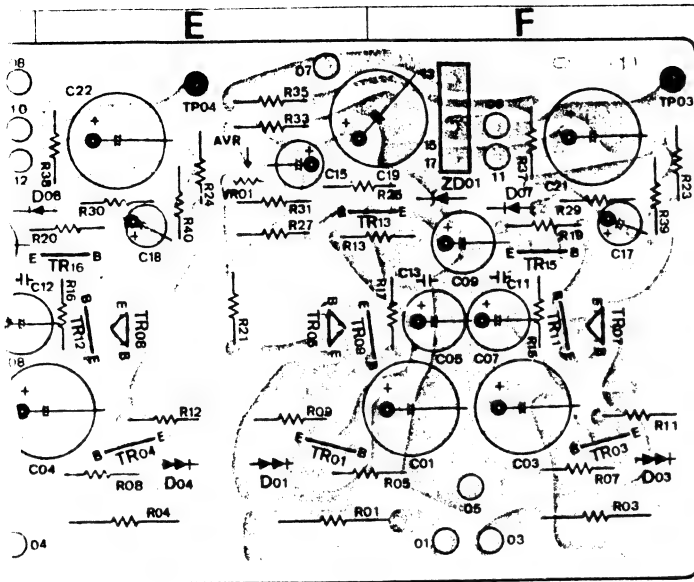

Parts List

Parts No.	Stock No.	Description	Position
R 49, 50	0280471	470Ω 1/3W C.R.	2B, 2A
R 51, 52	0280471	470Ω 1/3W C.R.	2C, 2B
R 53, 54	0280122	1.2kΩ 1/3W C.R.	1C, 1A
R 55, 56	0280122	1.2kΩ 1/3W C.R.	1C, 1B
R 57, 58	0280221	220Ω 1/3W C.R.	1, 2C, 1A
R 59, 60	0280221	220Ω 1/3W C.R.	1C, 1B
R 61, 62	0192229	2.2Ω 1/2W F.R.	1B, 1A
R 65, 66	0280561	560Ω 1/3W C.R.	1C, 1A
R 67, 68	0280102	1kΩ 1/2W C.R.	1B, 1A
R 69, 70	0280102	1kΩ 1/2W C.R.	1C, 1B
R 71, 72	0280392	3.9kΩ 1/3W C.R.	1B, 1A
R 73, 74	0280562	5.6kΩ 1/3W C.R.	1B, 1A
R 75, 76	0280103	10kΩ 1/3W C.R.	1B, 1A
R 77, 78	0280102	1kΩ 1/3W C.R.	1C, 1B
VR01, 02	1033670	4.7kΩ B DC Volt Adj.	1E, 1D
VR03, 04	1033650	2.2kΩ B DC Volt Adj.	1B, 1A

Conductor Side

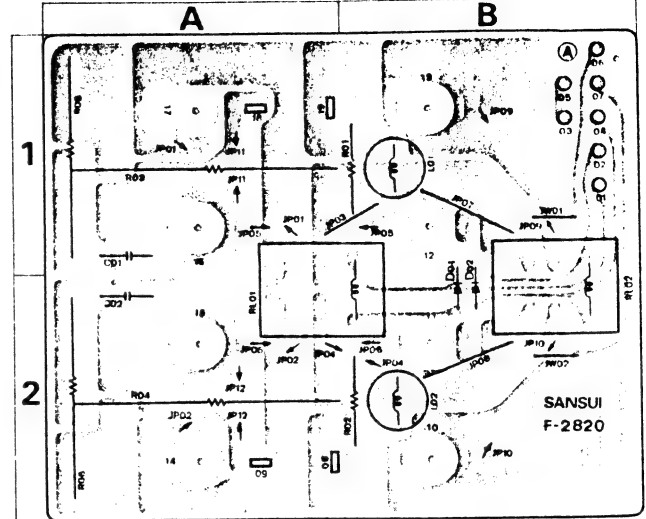


Parts List

Parts No.	Stock No.	Description	Position
•Diode			
D 01, 02	0310340	10D1	2B
C 01, 02	0681014	0.047μF 400V M.C.	1A, 2A
R 01, 02	0212109	1Ω 2W N.I.R.	1B, 2B
R 03, 04	0207100	10Ω 7W N.I.R.	1A, 2A
L 01, 02	4290370	RF Coil 1μH	1B, 2B
RL01, 02	1150410	Relay	2A, 2B

3-12. F-2777 MC, MM Switch Circuit Board

Conductor Side

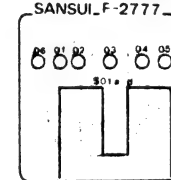


Parts List

Parts No.	Stock No.	Description
S 01	1131800	MM/MC Switch

3-13. F-2772 MC, MM Mother Circuit Board

Conductor Side

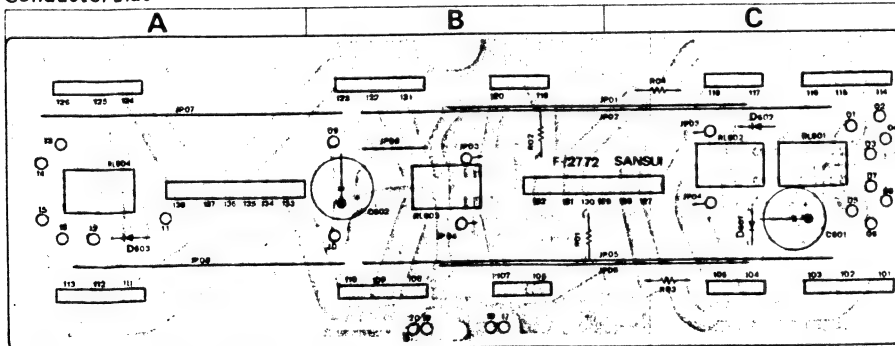


Parts List

Parts No.	Stock No.	Description	Position
•Diode			
D601 ~ 603	0310340	10D1	A, C
C 601	0504471	470μF 35V E.C.	C
C 602	0504471	470μF 35V E.C.	B
RL601 ~ 604	1150620	Relay	A, B, C

3-14. F-2776 Selector Switch Circuit Board

Conductor Side

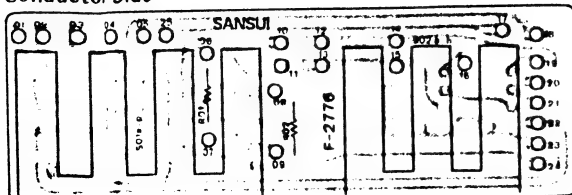

Parts List

Parts No.	Stock No.	Description
S 01	1131830	Selector Switch
S 02	1131820	Tape Play Switch

4. ADJUSTMENTS

Notes: 1. Level Volume Minimum
 2. Room Temperature 18°C ~ 28°C
 (65°F ~ 83°F)

3. When replacing some parts or circuit board, refer to description in REMARKS.
 4. For this adjustment, run the unit for more than 3 minutes after the power is switched ON.

4-1. F-2778 Power Supply Voltage Adjustment (See Top View on page 12)

STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1	For MC Head Amp L-CH	Between GND & TP01	VR03 F-2778	-10.5 V	
2	For MC Head Amp R-CH	Between GND & TP02	VR04 F-2778	-10.5 V	
3	For MM Head Amp L-CH	Between GND & TP03	VR01 F-2778	-47.5 V	
4	For MM Head Amp R-CH	Between GND & TP04	VR02 F-2778	-47.5 V	

4-2. F-2775 Driver Circuit Adjustment (See Top View on page 12)

STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1	DC 0V Adj. L-CH	Speaker terminal	VR01 F-2775	DC 0V ± 5 mV	Before turning ON power switch, set VR01 to center position.
2	DC 0V Adj. R-CH	Speaker terminal	VR01 F-2775		
3	Bias current Adj. L-CH	Between emitters of power transistors, TR701 & TR703 (between T.P Pin)	VR02 F-2775	DC 25 mV ± 1 mV	Before turning ON power switch, turn VR02 fully counterclockwise. This bias current adjustment converts current value into voltage by Ohm's law.
4	Bias current Adj. R-CH	Between emitters of power transistors, TR702 & TR704 (between T.P Pin)	VR02 F-2775		

4-3. F-2917, F-2918 MC Head Amp Adjustment (See Top View on page 12)

STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1	DC 0V Adj. L-CH F-2917	Between GND & common joint of emitter resistors R41, R47 (TP01)	VR01 F-2917	DC 0V ± 5 mV	Before turning ON power switch, set VR01 to center position.
2	DC 0V Adj. R-CH F-2918	Same as above	VR01 F-2918		

4-4. F-2770, F-2771 Equalizer Circuit Adjustment (See Top View on page 12)


STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1	DC 0V Adj. L-CH F-2770	Between GND & common joint of emitter resistors R38, R39 (TP01)	VR01 F-2770	DC 0V ± 50 mV	Before turning ON power switch, set VR01 to center position.
2	DC 0V Adj. R-CH F-2771	Same as above	VR01 F-2771		

4-5. F-2819 Flat Amp Circuit Adjustment (See Top View & Bottom View on page 12)


STEP	SUBJECT	MEASURE OUTPUT	ADJUST	ADJUST FOR	REMARKS
1	DC 0V Adj. L-CH	Between chassis and collector connecting point TP01 of TR15 & TR17 (Top View)	VR01 F-2819	DC 0V ± 5 mV	Before turning ON power switch, set VR01 & VR02 to center position.
2	DC 0V Adj. R-CH	Between chassis and collector connecting point TP02 of TR16 & TR18 (Bottom View)	VR02 F-2819		

5. OTHER PARTS


5-1. Top View

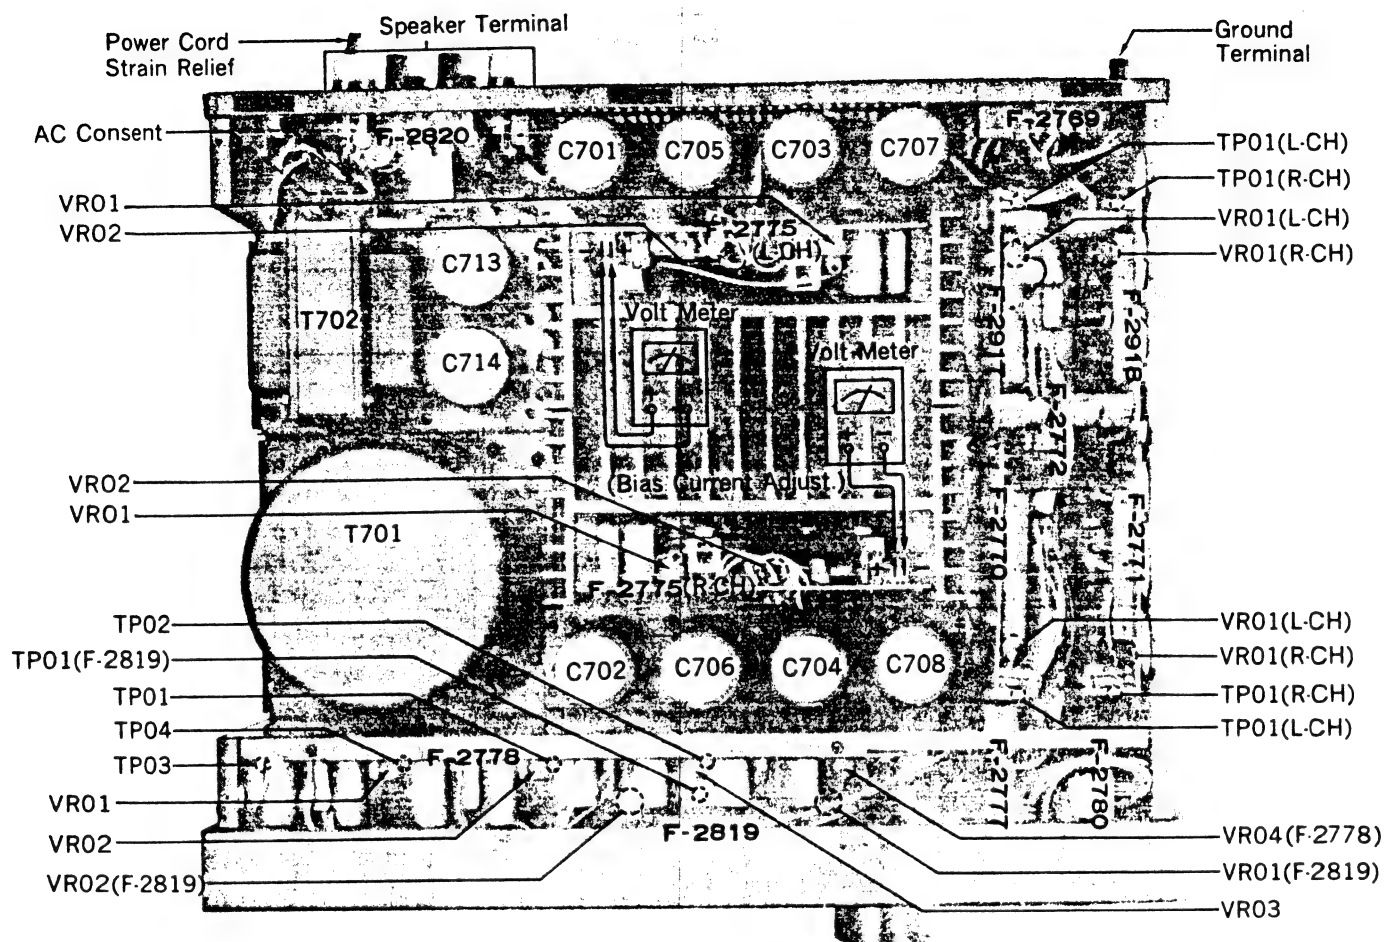

5-2. Front View

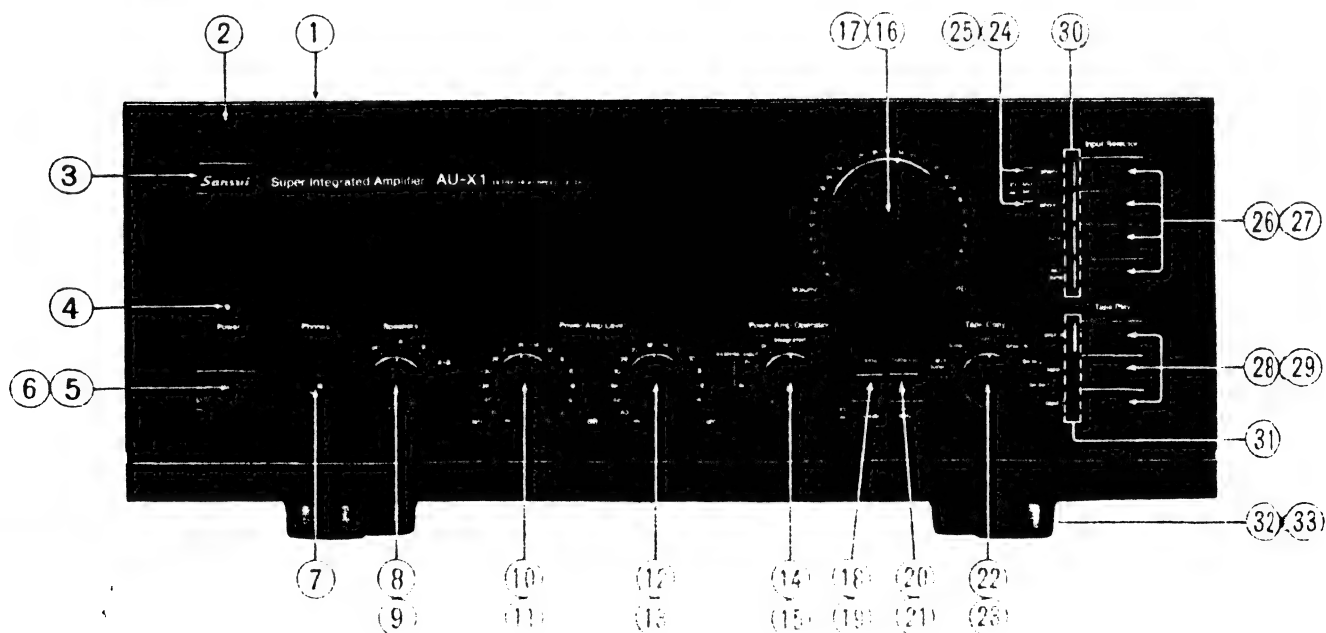

5-3. Bottom View

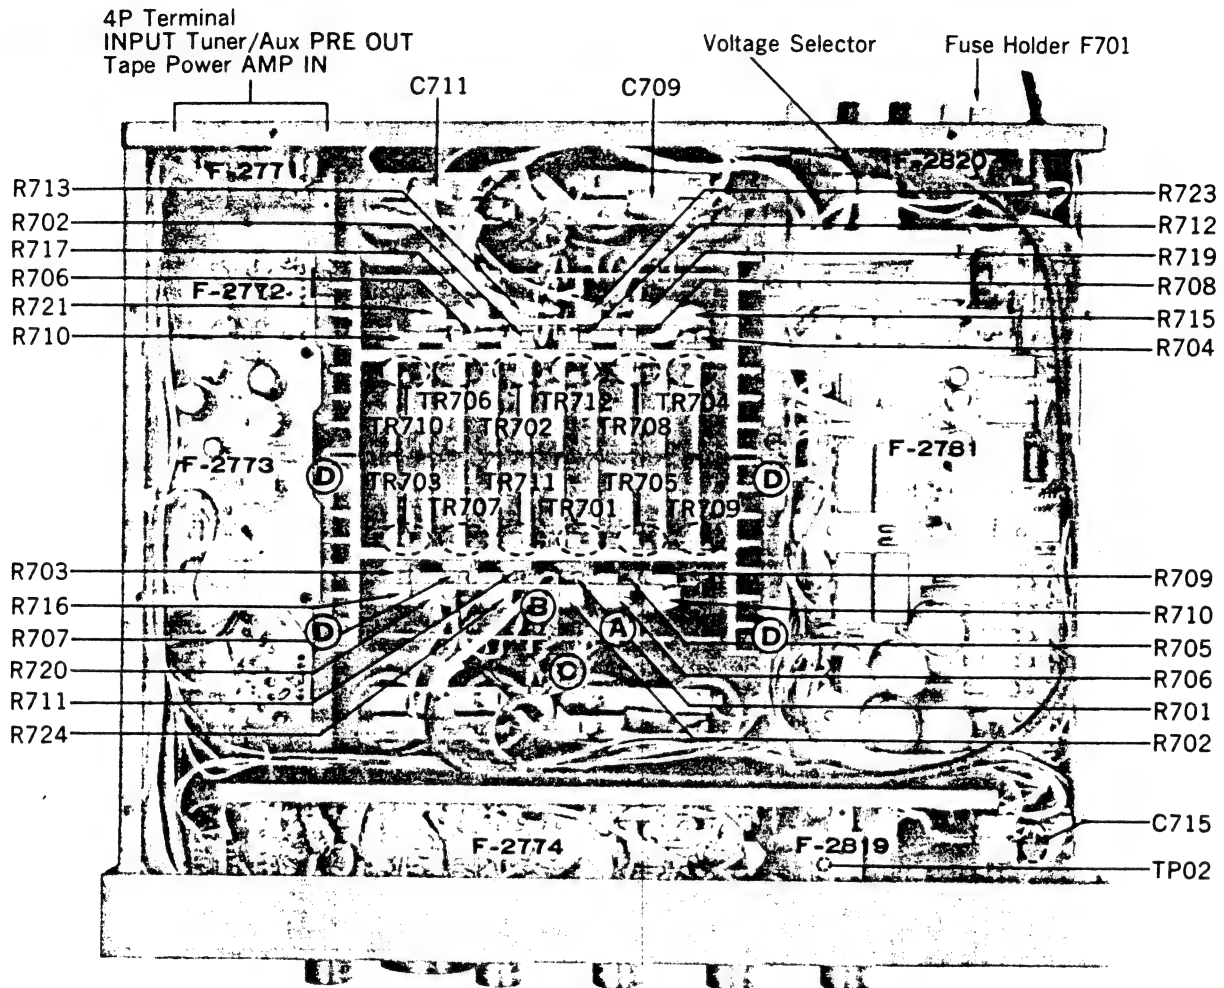


Parts List <Top View, Front View & Bottom View>

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
• Transistor			11	5319210	Knob, level volume, Y-7 type	2450070		AC Consent
TR701, 702	0306890, 1	2SC2493 O, Y	12	1000360	Right Level Volume, 50kΩ	2230190		Ground Terminal
TR703, 704	0301200, 1	2SA1068 O, Y	13	5319210	Knob, level volume, Y-7 type	3800480		Power Cord
TR705, 706	0306890, 1	2SC2493 O, Y	14	1190640	Power Amp Operation Switch	3910490		Strain Relief, power cord
TR707, 708	0301200, 1	2SC1068 O, Y	15	5319210	Knob, power amp operation switch	2230220		1P Speaker Terminal (Red)
TR709, 710	0306890, 1	2SC2493 O, Y	16	1090500	Volume, 50kΩ	2230230		1P Speaker Terminal (Black)
TR711, 712	0301200, 1	2SA1068 O, Y	17	5319200	Knob, volume, X-7 type	2200630		4P Input Terminal, phono
C701 ~ 708	0559851	10000μF 80V E.C.	18, 20	1131810	Jump, subsonic switch			shorting type
C709 ~ 712	0681033	1μF 250V M.C.	19, 21	5326760	Knob, jump switch	2200620		4P Input Terminal, aux/tuner,
C 713, 714	0559850	2200μF 100V E.C.	22	1104400	Tape Copy Switch			shorting type
C 715	0659801	0.01μF 150V C.C.	23	5319210	Knob, tape copy switch, Y-7 type	2200650		4P Tape Terminal, non-shorting type
R701 ~ 712	0200479	47Ω 1/2W N.I.R.	24	1131800	MM/MC Switch	2200620		4P Power AMP IN Terminal,
R713 ~ 724	0159130	0.33Ω 5W Ce R.	25	7106150	Knob Ass'y, MM/MC Switch			shorting type
1	5006810	Bonnet	26	1131830	Input Selector Switch	2200580		4P PRE OUT Terminal,
2	7008150	Front Panel Ass'y	27	5326750	Knob, input selector switch			non-shorting type
3	5336600	Sensui Badge	28	1131820	Tape Play Switch	T701	4002960	Power Transformer
4	0319090	LED	29	5326750	Knob, tape play switch	T702	4002970	Power Transformer
	5152210	CS Washer	30	5396630	4P Guide Plate Ass'y			
	17106150	Knob Ass'y		5426420	Indicator	2410091		Voltage Selector, Plug
5	1131790	Power Switch		5426440	Color Plate	2410830		Voltage Selector, Socket
6	536740	Knob, power switch, p type	31	5396570	3P Guide Plate Ass'y			
7	2430290	Phone Jack		5426240	Indicator	F701	0432290	5A 125V AC 100V, 120V
8	1190640	Speakers Switch		5426440	Color Plate		0434060	10A 250V AC 220V, 240V Fuse
9	5319210	Knob, speakers switch, Y-7 type		5396580	3P Guide Plate			
10	1000360	Left Level Volume 50kΩ	32	5059030	Bottom Plate	2300060		AC Fuse Holder
			33	6517050	Leg			

6. SCHEMATIC DIAGRAM

6-1. Pre Amp Section

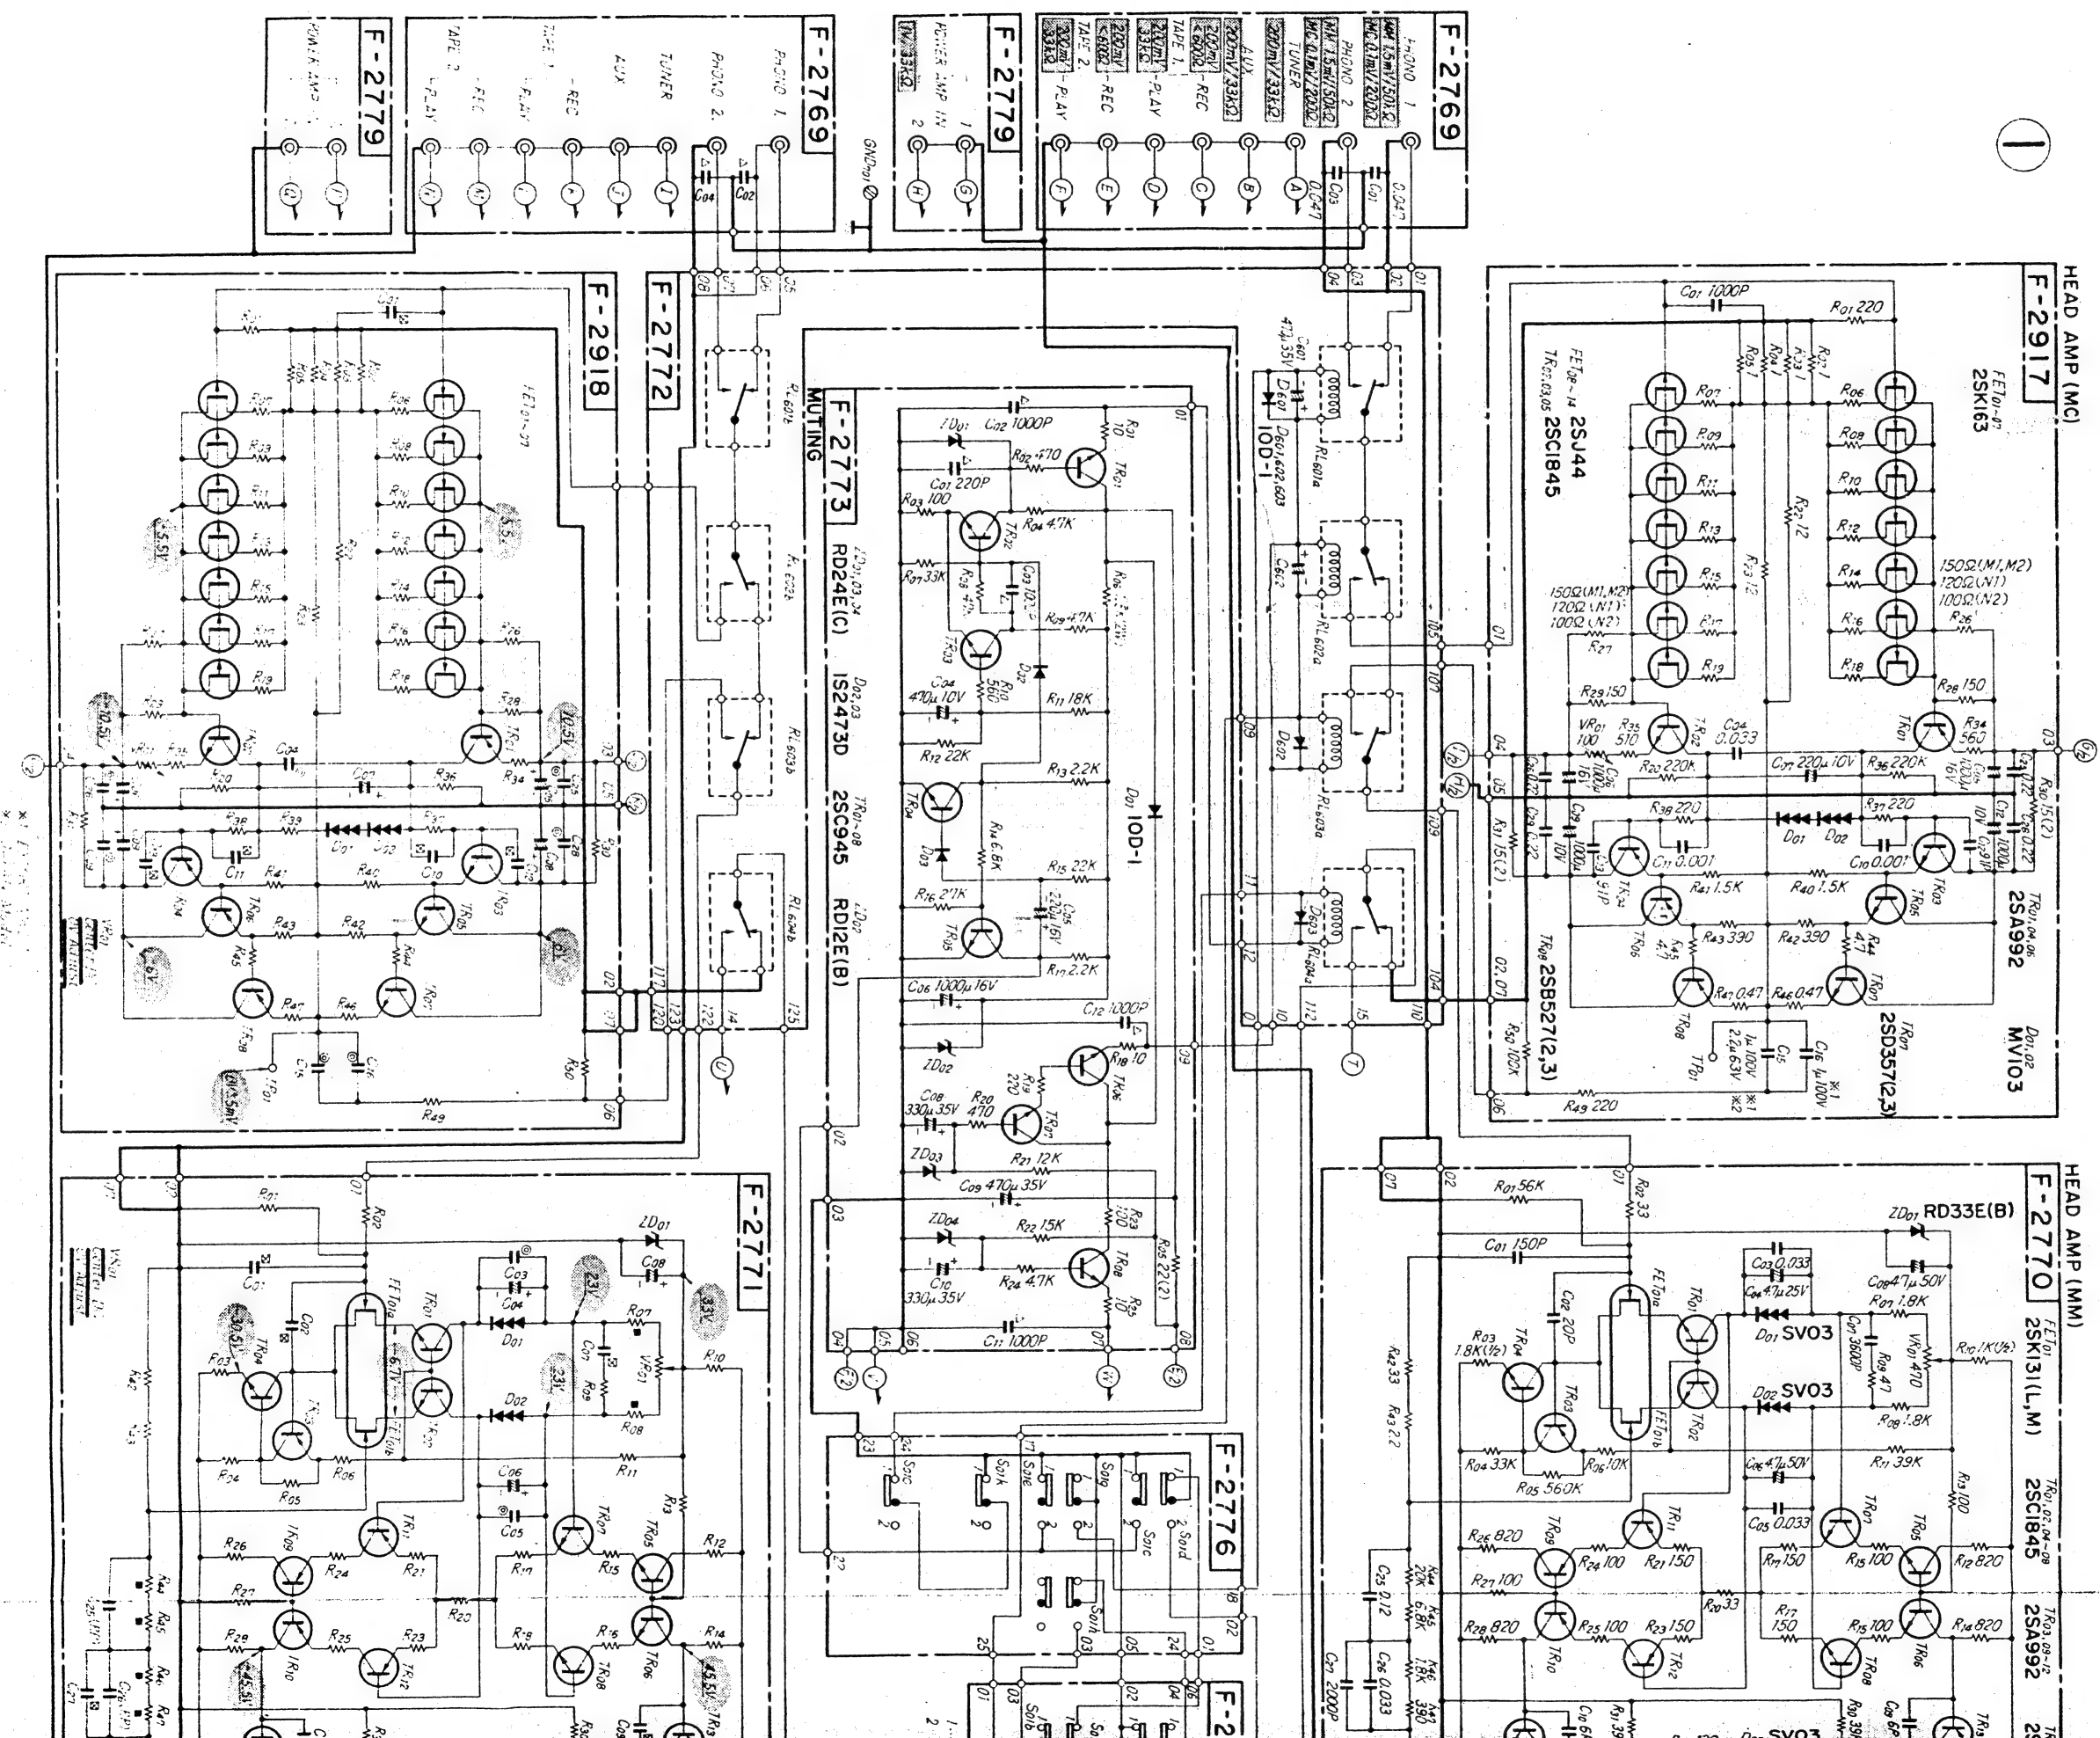

-X1 AU-X1

Design and specifications subject to change without notice for improvement.
La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.
Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.


E

F


G

H


TR1 2SC1845 TR2 2SA992 TR3 2SA917 TR4 2SC1845 TR5 2SD357(2,3)

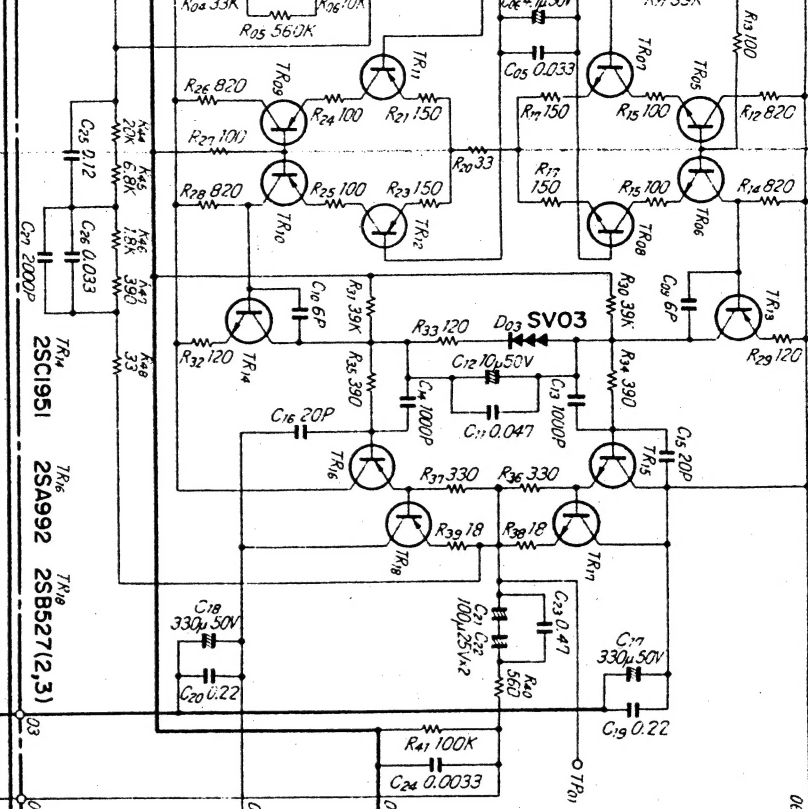


FLAT AMP
F-2819 1/2 TR6 2SA992 TR7 2SC1845 TR8 2SC1951-1(2) VD1212

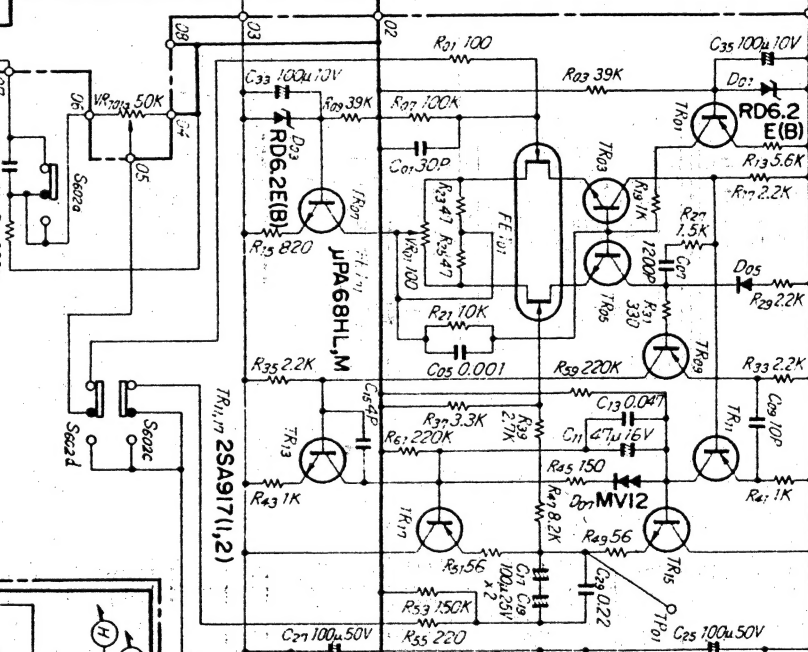

F-2779 PRE OUT

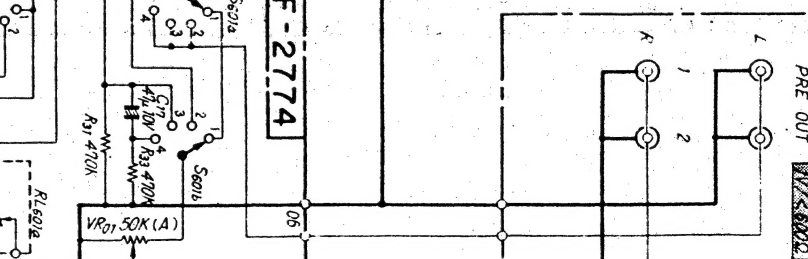


-2776 F-2777

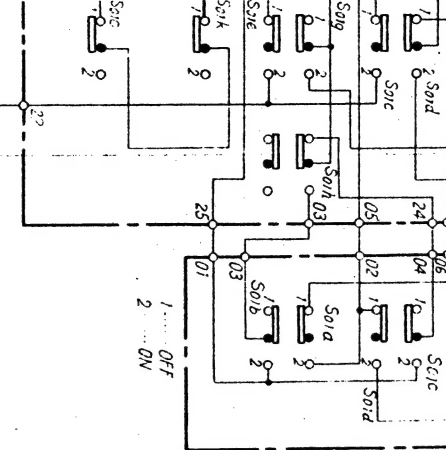


SWITCHES & CONTROLS
Selector (F-2776, 2780)
S1 (b-d) Phono 1 2
S1 (e-h) Phono 2 2
S1 (i-l) Tuner 2
S1 (m-p) Aux/Tuner 2
Tape Play (F-2776, 2780) 2
S2 (a-d) Source 2
S2 (e-h) Tape 1 2
S2 (i-l) Tape 2 2
MM MC Selector (F-2777)
S3 (a-b) Phono 1 off MM, on MC
S3 (c-d) Phono 2 off MM, on MC
S3 (e-f) off, on (-14dB)
Subsonic (F-2819)
S4 (a-b) off, on (-3dB/16Hz)
Tact (Copy) (F-2774)
S4 (c-d) 1. Aux, Tuner
2. Tuner
3. off
4. Source
5. S-1-2
6. S-2-1
Power Amp Operation (F-2774)
S5 (a-d) 1. Integrated
2. External input 1 (DC)
3. External input 2 (DC)
4. External input 2 (AC)





F-2776

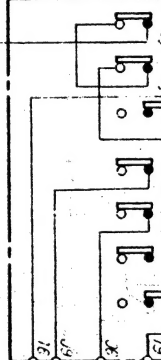


F-2819 1/2


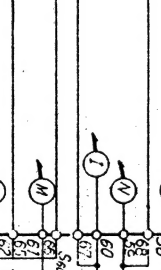


F-2774

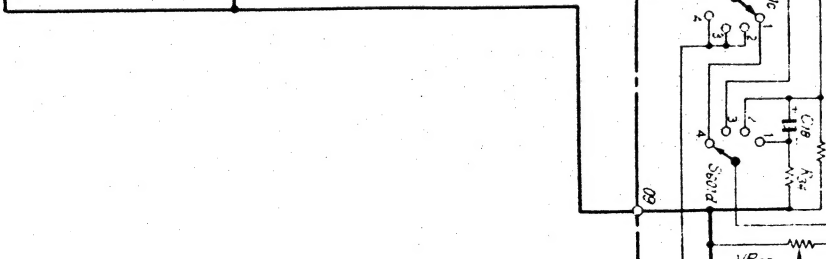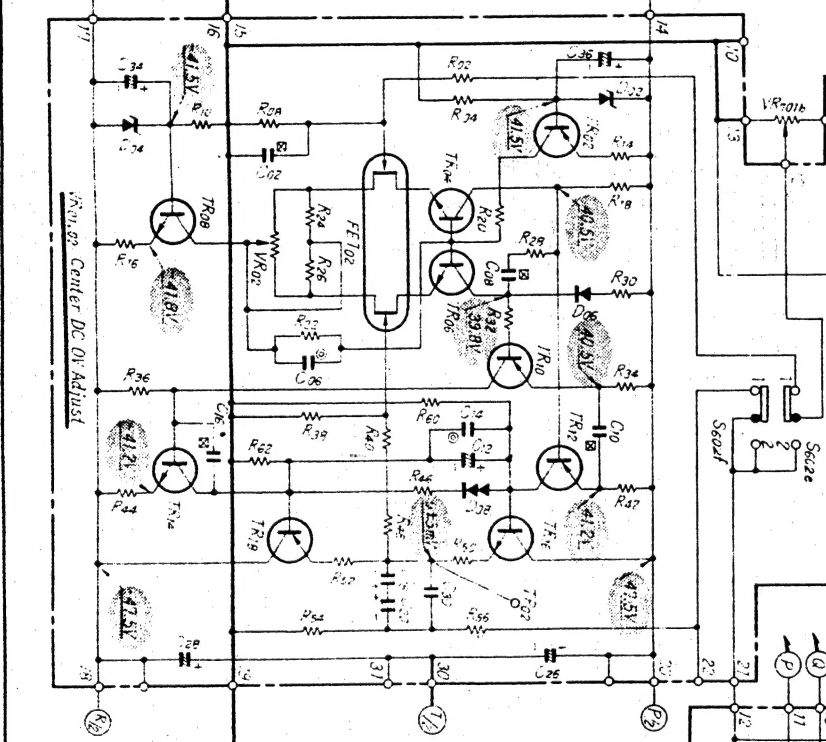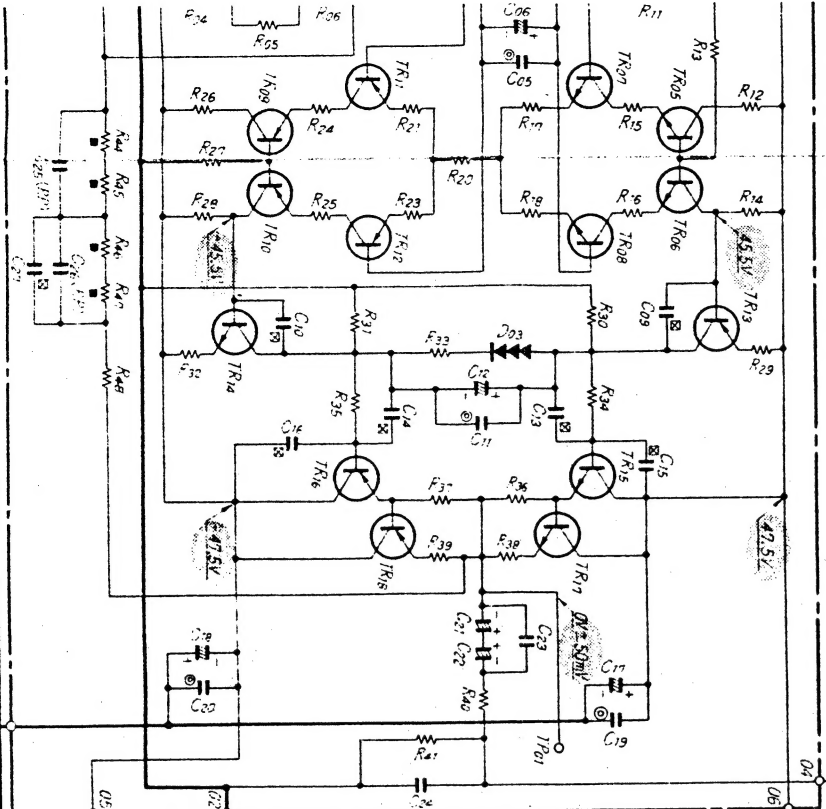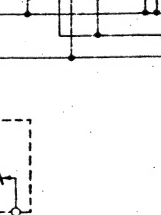

6-2. Main Amp & Power Supply Section

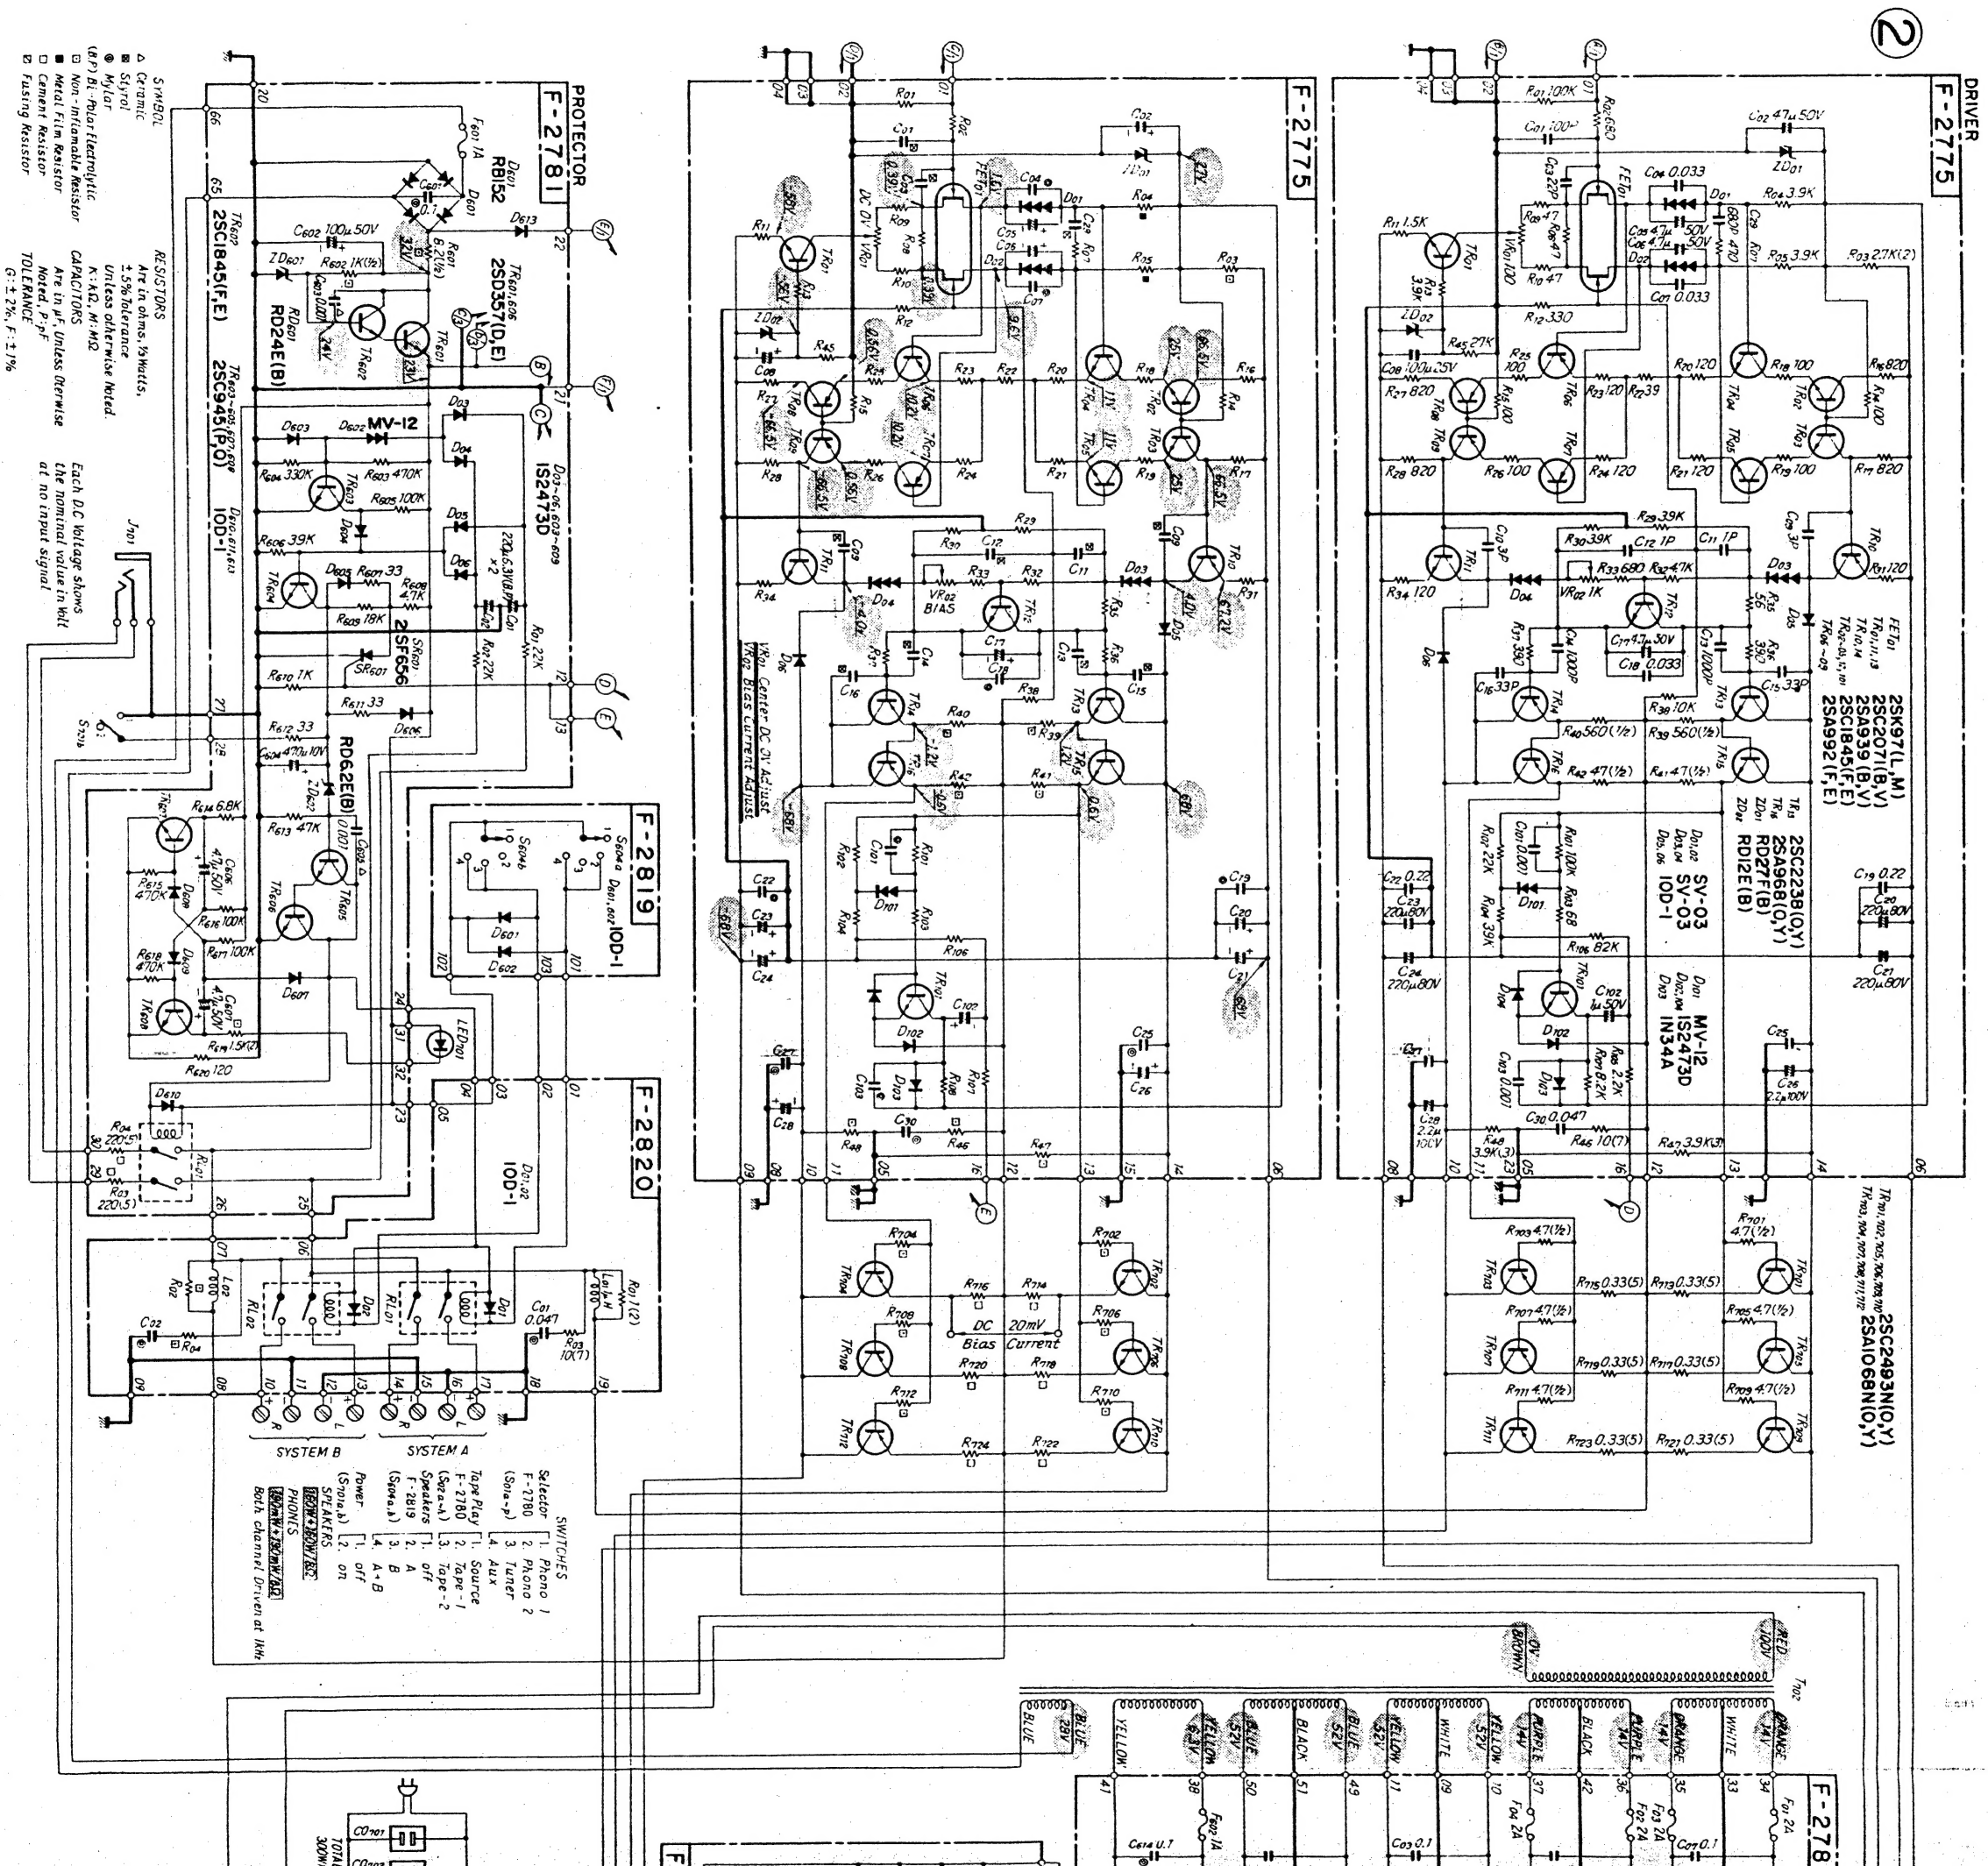

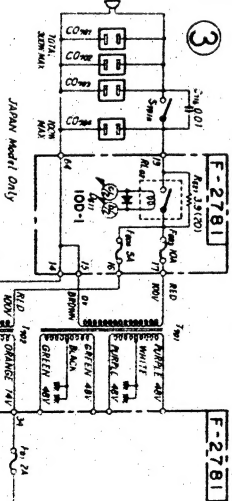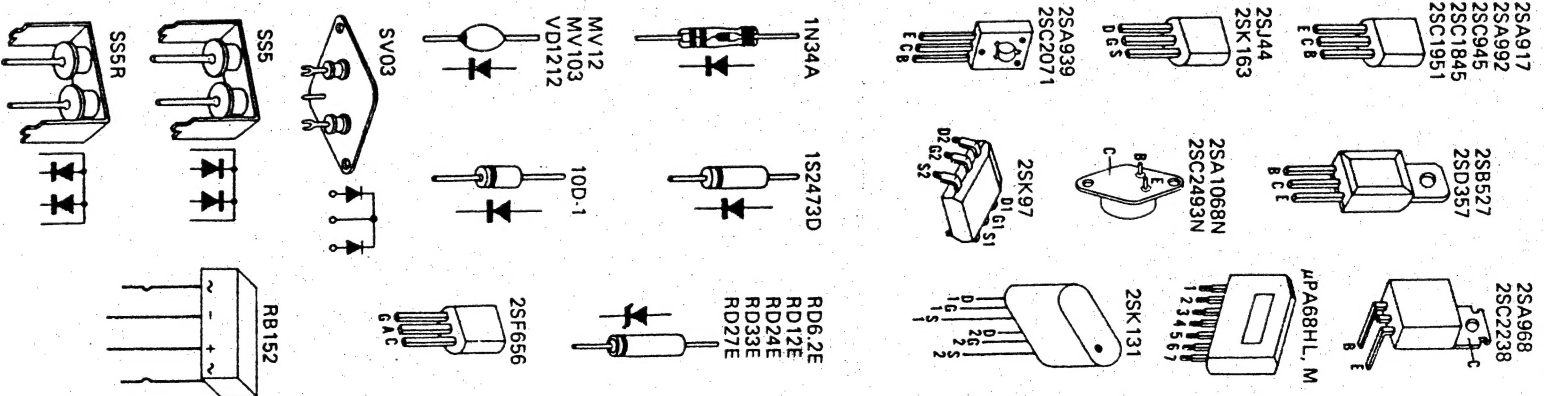

7. REPLACEMENT OF MAIN PARTS (See Vottom View on page 12)

1) Replacement of Driver circuit board, F-2775.

- * Remove bottom plate.
- * Remove 3p connector, A.
- * Disconnect +side of speaker cord, point B.
- * Disconnect earth wires (two pieces of black wires).
- * Loosen 4 screws fixing heat sink, then pull out the heat sink.

2) Replacement of Power transistor.

- * Pull out the heat sink by the same procedure of driver circuit board replacement above.
- * Loosen the screws mounting the power transistor and pluck out the transistor.

3) Replacement of Front panel Ass'y.

- * Remove bonnet.
- * Loosen 4 screws fixing front panel from both side.
- * Remove knobs.
- * Loosen a screw under the volume knob and take off a nut fixing speaker switch.

4) Replacement of flat amp & Tape copy switch circuit board, F-2819, F-2774.


- * Remove front panel ass'y & bonnet.
- * Loosen 4 screws fixing back panel to chassis, and pull out the back panel.

5) Replacement of speaker terminal board, F-2820 and protector relay.

- * Remove bottom plate & bonnet.
- * Loosen 8 screws fixing Rear panel to chassis.
- * Take off 8 of speaker terminal and remove speaker terminal circuit board from Rear panel.
- * Replace the protector relay.

8. PACKING LIST

Parts No.	Stock No.	Description
1	9116800	Vinyl Cover
2	9028310	Styrofoam Packing
3	9019520	Packing
4	9001570	Carton Case
5	5996080	Curl Stopper

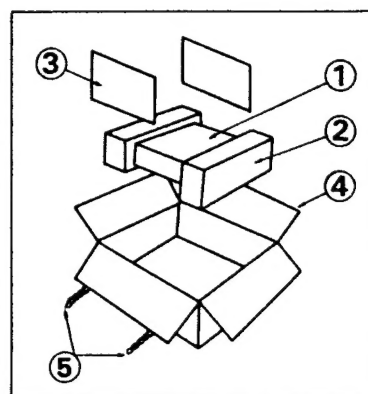

9. ACCESSORY PARTS LIST

Stock No.	Description
9203920	Operating Instructions
9238000	Schematic Diagram